



IMPORTANT



Be Sure
to Read this
Manual
Before Use



UNIS TECHNOLOGY

Operation Manual

WE ARE HERE TO ASSIST For parts and service



Have Questions? Contact us!

UNIS SERVICE CENTER

Tel: 972-241-4263

Email: service@unispartsandservice.com

NAME:TICKET DOME R GMP	
MODEL: T-351	
S/N:	
VOLTAGE: Ac110	
Guangdong UNIS Technology Co.,Ltd.	

NAME: TICKET DOME R GMP	
MODEL: T-351	
S/N:	
VOLTAGE: AC220V-240V	
Guangdong UNIS Technology Co.,Ltd.	

CONTENT

IMPORTANT SAFETY INSTRUCTIONS.....	3
1. SPECIFICATIONS.....	5
2. CONTENTS OF THE ACCESSORY KIT.....	6
3. PART NAME.....	7
4. SET UP & INSTALLATION.....	8
5. HOW TO PLAY.....	14
6. GAME OPTION.....	18
7. TROUBLESHOOTING.....	25
8. MAINTENANCE & INSPECTION.....	26
9. OVERALL CONSTRUCTION.....	40
10. WIRING DIAGRAM.....	68

Thank you for purchasing Ticket Dome R GMP. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your game machine properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

If you need any help during installation and setup please utilize this manual and troubleshooting guide. If the product fails to function properly, *non-technical personnel should under no circumstance attempt to service the machine*. Contact your distributor or manufacturer for help.

Before use, please read **IMPORTANT SAFETY INSTRUCTIONS**.

IMPORTANT SAFETY INSTRUCTIONS

To ensure the safe usage of this product, carefully read and understand these instructions before operating your game.

Save these instructions for future reference.

Use this product only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury. Unplug the game from the outlet when not in use, when moving from one location to another, and before cleaning/servicing.

Explanations which require special attention are indicated by signs of warning. Depending on the potential hazardous degree, the terms: **NOTE**, **NOTICE**, and **WARNING** are used.

NOTE: A NOTE indicates useful hints or information about product usage.

NOTICE: A NOTICE indicates potential damage to product and how to avoid the problem.

WARNING: A WARNING indicates a potential for product damage or serious personal injury.

It is important to understand the meaning of the following HAZARD SIGNS before continuing:

High Voltage and Shock Hazard:

High voltage can cause electric shock.
Turn off/unplug power before servicing.



High Temperature Hazard:

This part may cause scalding.
Do not touch. Surface may be hot.



No Touching Hazard:

This part may be hot or can cause electric shock.
Do not touch.



Use the following safety guidelines to help ensure your own personal safety and to help protect your equipment and surrounding environment from potential damage.

⚠️ This product is an indoor game machine. Do not install outdoors.

Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:

- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire.
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures.

IMPORTANT NOTE:

ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.

Note: The contents of this manual may be updated without notice.

1. SPECIFICATIONS

Rated power supply: AC110V 50/60Hz; AC220V -240V~ 50/60Hz (It is subject to the nameplate on the back of the machine.)

Min. Power consumption: 240W

Max. Power consumption: 380W

Dimension:Width: 58.66" (1490mm)

Depth: 58.66" (1490mm)


Height: 56.94"(1515mm)

Weight: Approximately 380.37 lb (345kg)

Model No: T-351

Part No: T151

 **NOTICE:** After turning off the game, please wait at least 1 minute before restarting again.


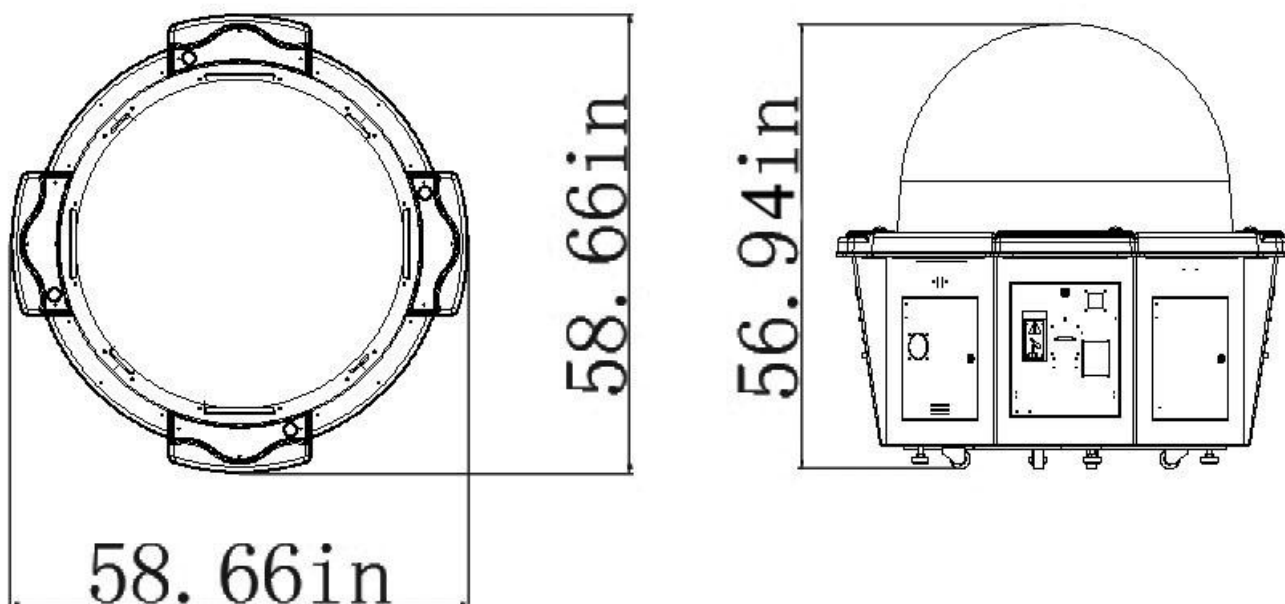


ote: Game specifications are subject to change without notice.

2. CONTENTS OF THE ACCESSORY KIT

Open the package and make sure all the items are included:


Following accessories

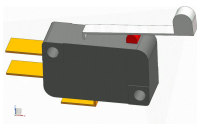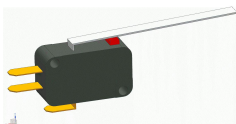No.	Part No.	Code No.	Name	Spec.	Qty	Picture
1	T151-801-000	41440000308	Manual	English	1	
2	T151-802-000	25300171002	Key	171A	1	
3	T151-803-000	25300172002	Key	171B	1	
4	T151-804-000	23301000001	Power cord	1.8M	1	
5	T151-805-000	21901000043	Fuse	6.3A	2	
6	T151-806-000	26601090367	Micro Switch	D3V-6G-1C24	1	
7	T151-807-000	26601101735	Micro Switch	/	1	
8	T151-808-000	26601101736	Optical coupler	/	1	
9	T151-809-000	26601101738	Extended line	1.2M (Maintenance and use)	1	/
10	T151-408-000	26601101737	Display	SMG8102_3W .PCB V3.0	1	

NOTE: Part models are subject to change without notice.

3. PART NAME

Key Components

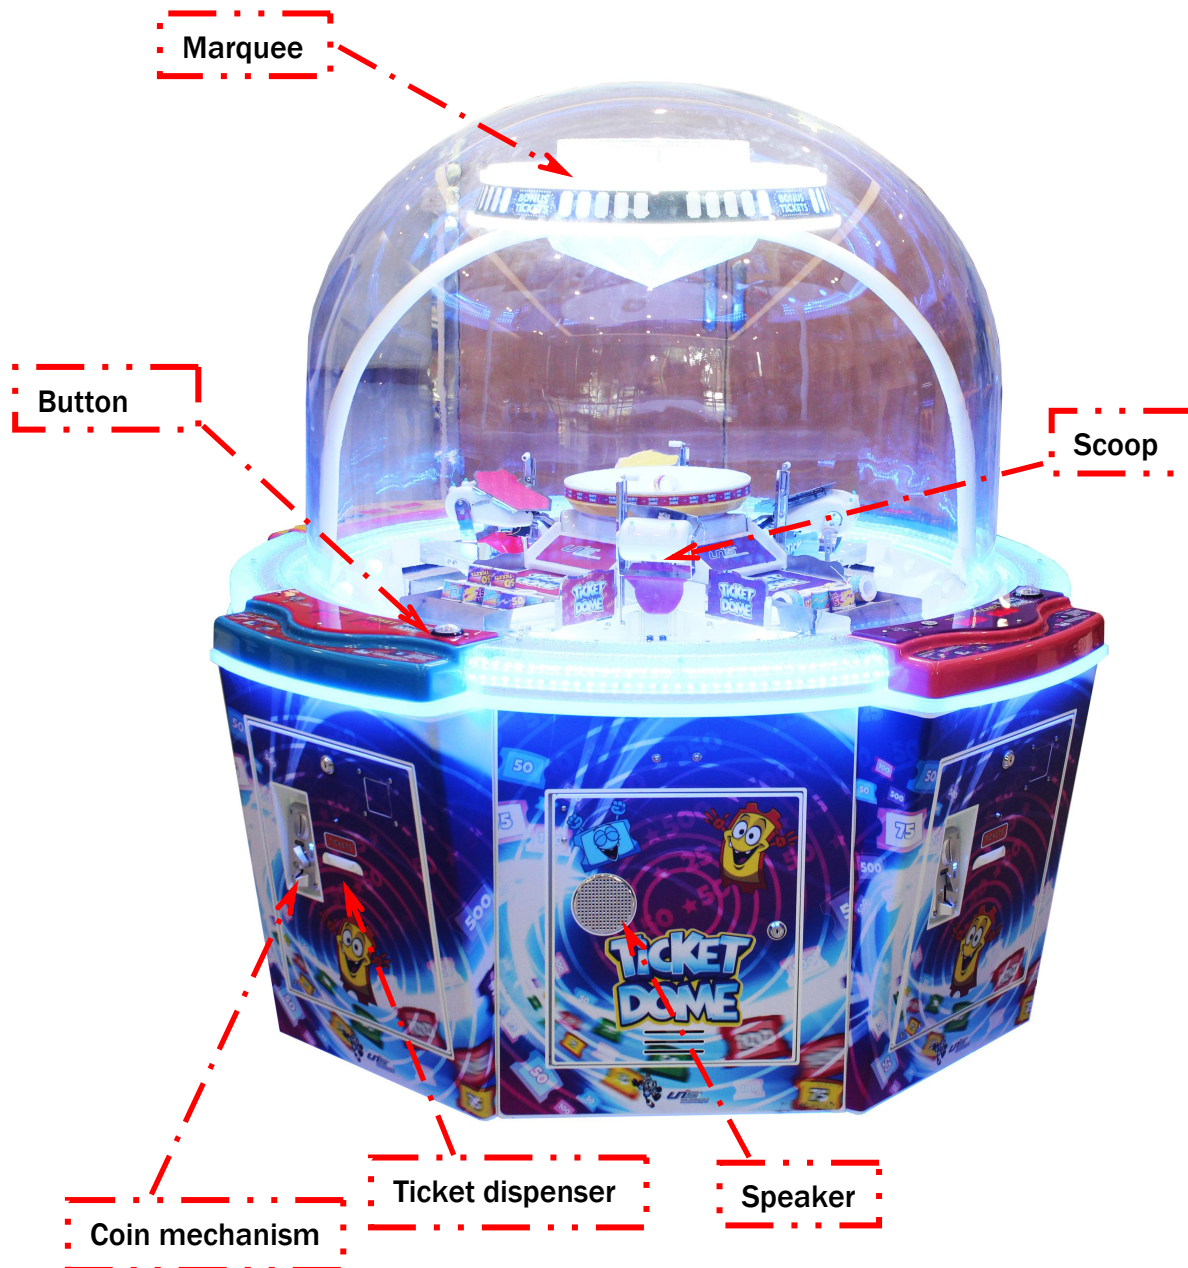

4. SET UP & INSTALLATION

! NOTICE


We do not recommend using power tools as they may cause damage.

! This product is an indoor game machine. Do not install outdoors.

- Refer to IMPORTANT SAFETY INSTRUCTIONS (Pg. 3) for places to avoid
- Place the unit on a dry level surface
- Ventilation openings in the back of the unit must not be obstructed by objects or by wall.

4.1 Transporting the Game


If you need to move the game, adjust the levelers back to an “up” position.

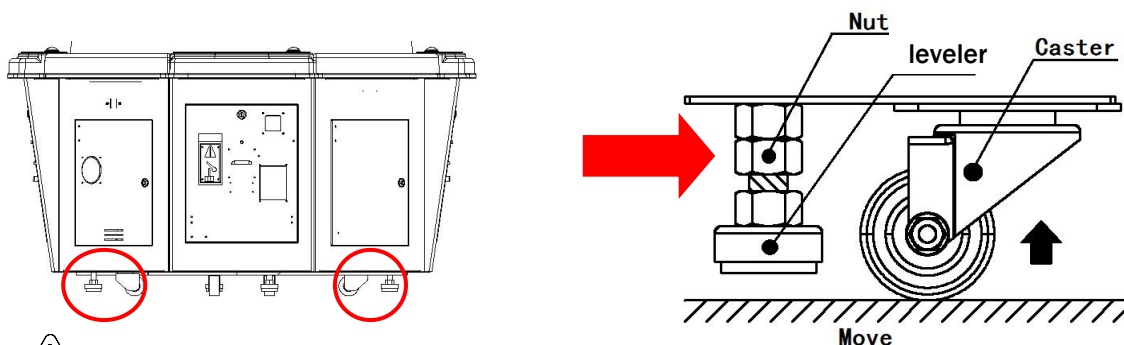


! NOTICE

- Be careful not to damage the machine during transport.
- Always unplug the game before moving.
- For longer distance transport, package the game properly to prevent damages.

Please keep the machine in upright position during transport.

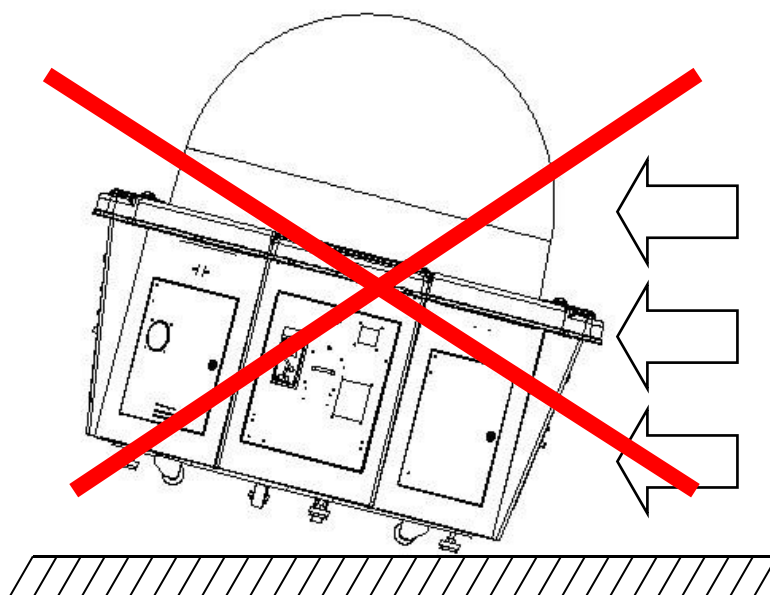


This procedure requires 4 people assistance.

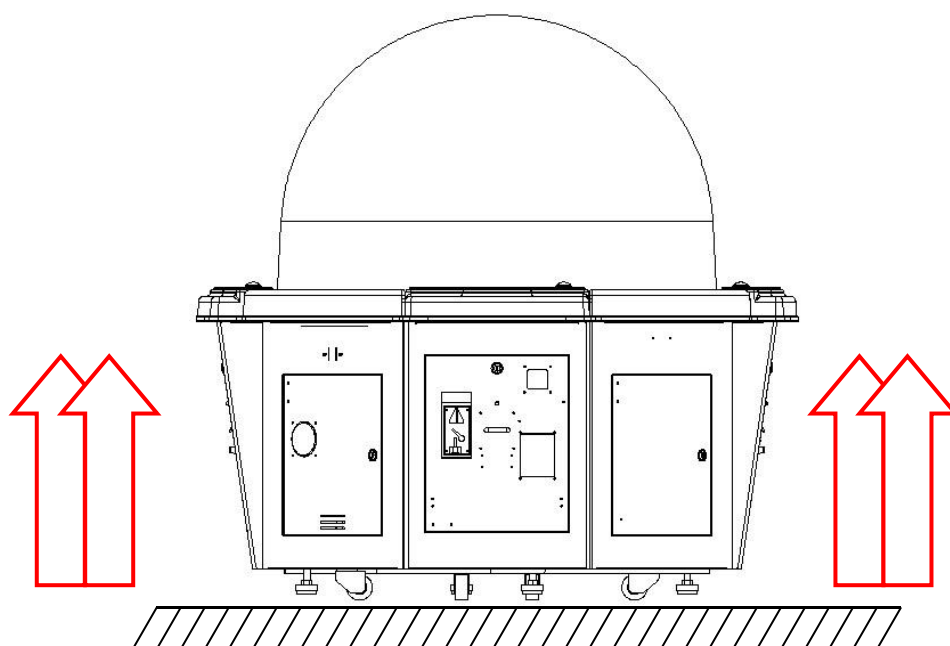

4.2 Level Adjustment

Install this game on a flat surface. If the game is installed on an unsuitable floor, it could cause game malfunction.

To secure the game, loosen the nut, utilize wrench to adjust the leveler down until it touches the floor, lifting the casters off the ground by 0.2 in. Repeat the same for all levelers.

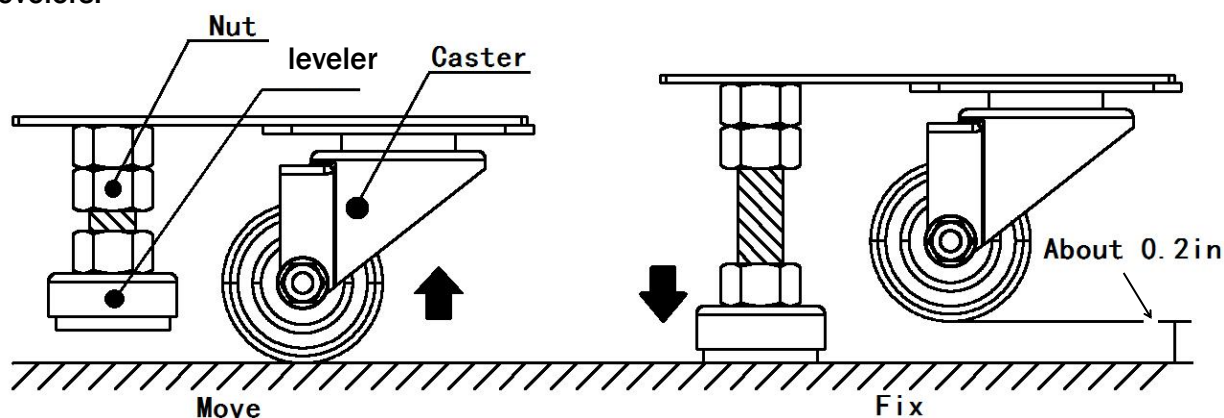

! NOTICE


Make sure the machine is level.

4.3 Play Zone

This machine requires space for playing and for maintenance as shown below.

Leave space around the game upon installation:

Play area: 20 in

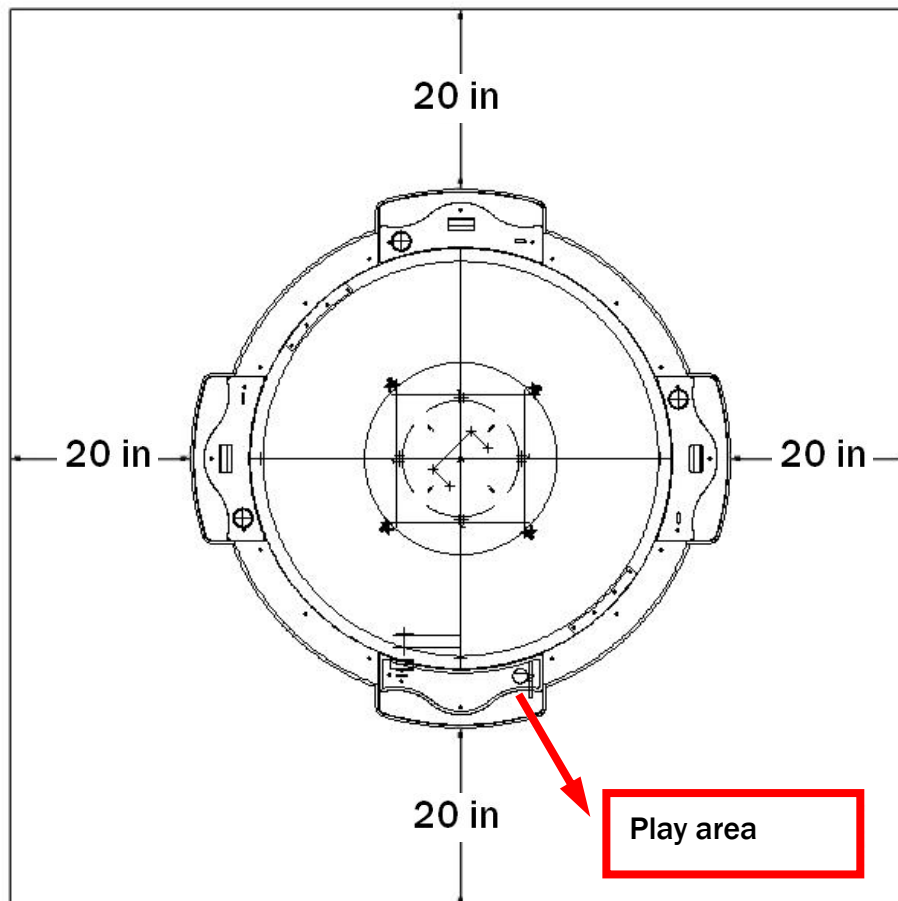

4.4 Instruction of Resetting The Machine to Normal Mode


In order to avoid damage during transportation, the machine is preset to Transportation mode, in which all the scoops are lowered and fixed.

Warning: The machine needs to be reset to Normal mode upon unpacking. Please follow the steps.


Step 1 Remove all the PE-film and foam.




Step 2 Open the Service door between Yellow and Blue player, where the IO-board locates.

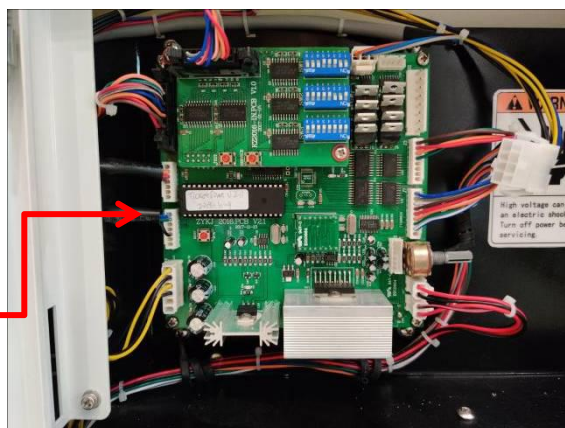

Step 3 Turn the Switch as Right picture shown.

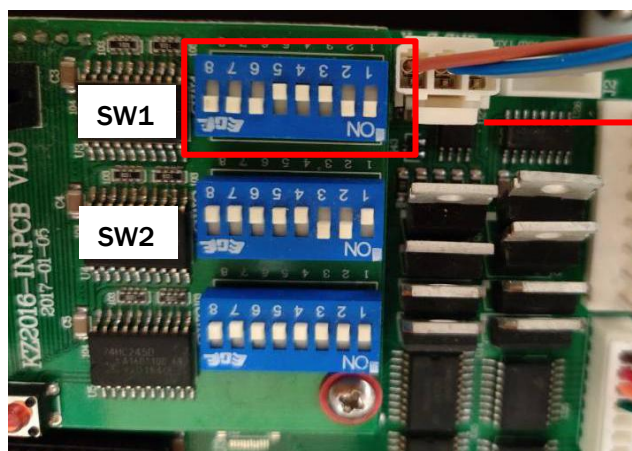

(Factory Restore mode)

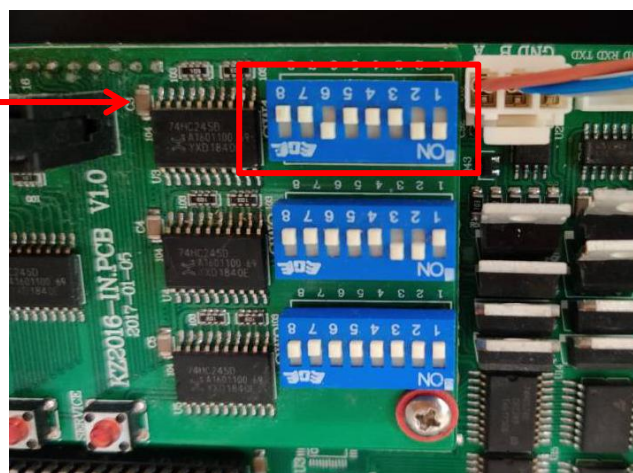


(Normal mode)



Step 4 Power on the machine.

4.5 Card Reader Installation


Step 1 Locate the Coin door. Open the coin door. Utilize Allen wrench(2.5mm) to loosen 4 screws to remove Card reader plate.

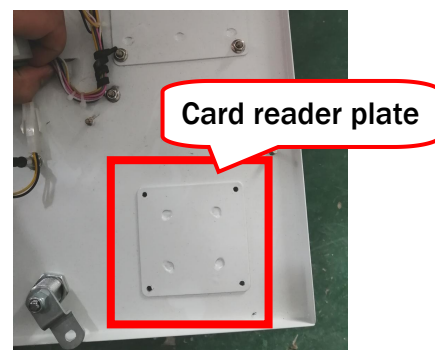

Step 2 Utilize knife or scissors to cut properly decal position for Card reader. Utilize Spanner to loosen 2 nuts indicated by circles. Place Card reader receiver on it and install it by 2 nuts.

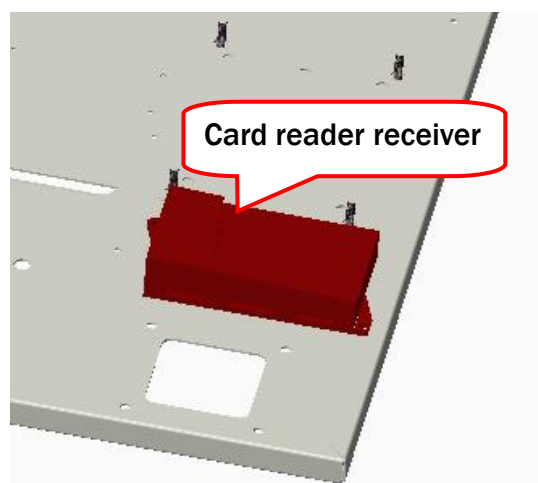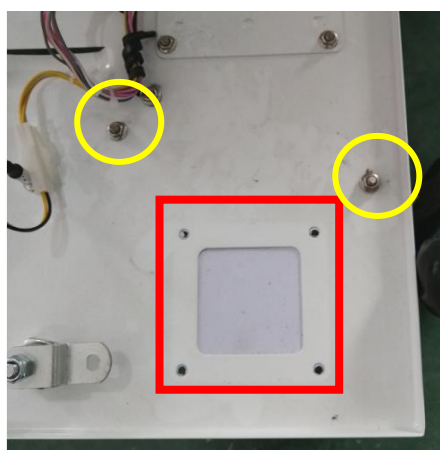


Step 3 Place Card reader on it. Utilize Allen wrench(2.5mm) to tighten 4 screws to Card reader. Connect Card reader connector.

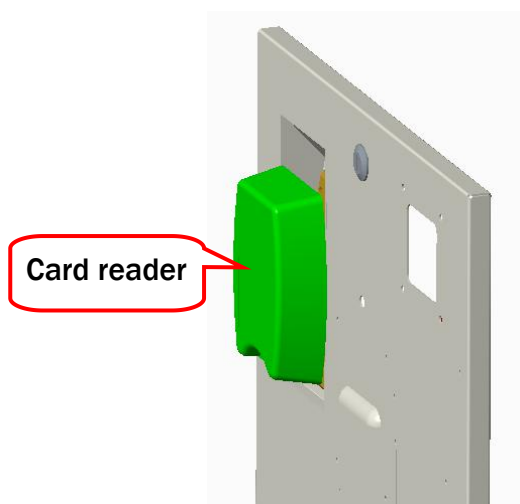


NOTE: The installation of the Card reader is to be completed by each individual location. (Not included)

4.6 DBV Installation


Step 1 Locate the Coin door. Open the coin door. Utilize Spanner(5.5/7) to loosen 4 nuts to remove DBV plate.

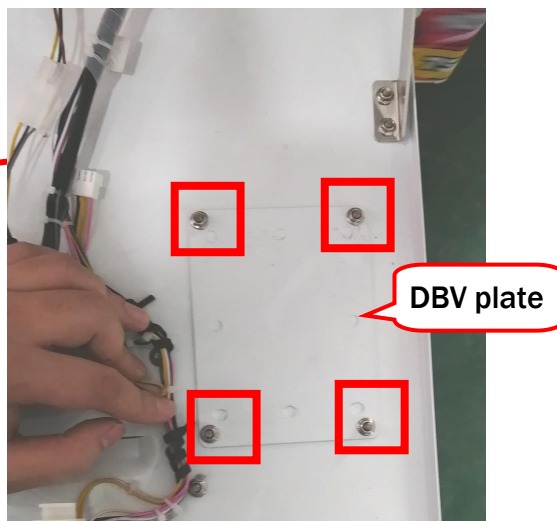

Step 2 Utilize knife or scissors to cut properly decal position for DBV.

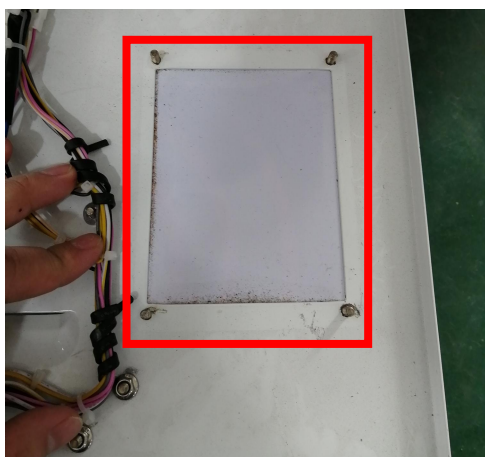


Step 3 Place DBV on it. Utilize Spanner(5.5/7) to tighten 4 nuts to DBV. Connect DBV connector.

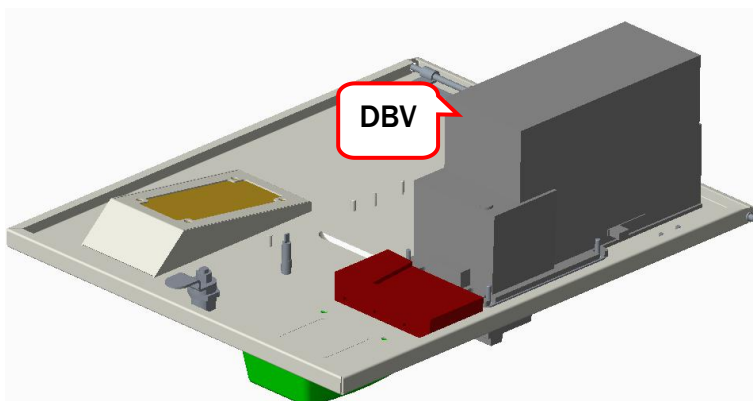

NOTE: The installation of the DBV is to be completed by each individual location. (Not included)


4.7 Machine Installation

Step 1 Locate Diamond marquee. Loosen screws to remove Diamond marquee base plate.

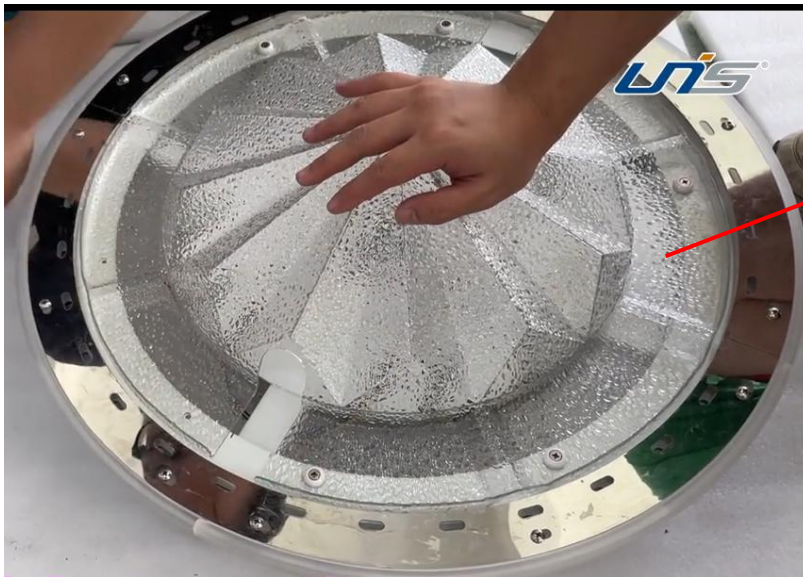

Diamond marquee
base plate

Step 2 Place Marquee support plate on the Diamond marquee. Utilize cross recessed pan head screws to secure.

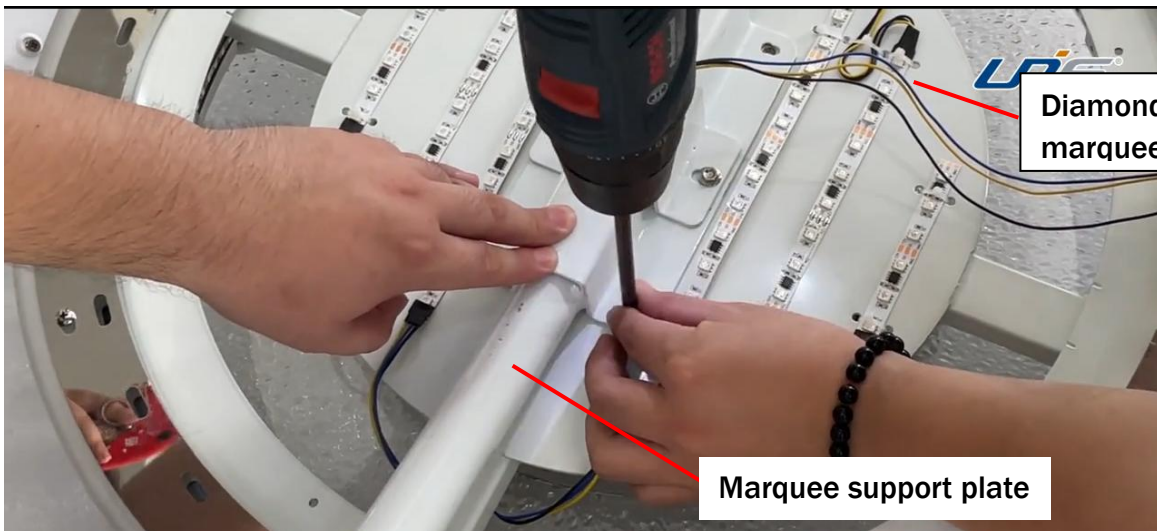

Diamond
marquee

Marquee support plate


Step 3 Install the Diamond marquee base plate back



Diamond marquee
base plate

Step 4 Place Diamond marquee to the Cabinet. Insert the Marquee connector into the cabinet hole; Utilize screws to secure the Marquee.


Note: The side with the cable connector should be installed on the Service door between Yellow and Red player, where the IO-board locates.

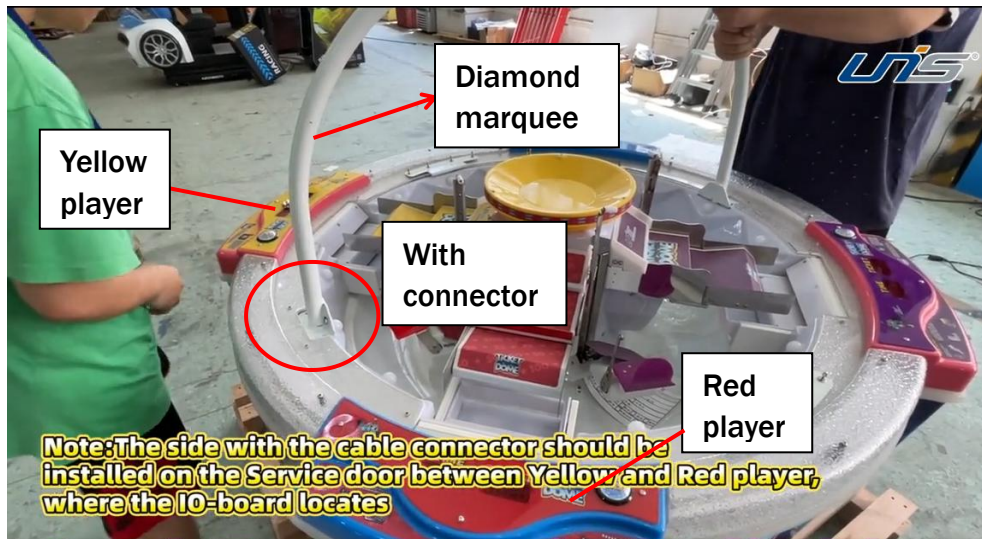


Step 5 Open the service door and connect the connector.



Step 6 Loosen screws to remove Diamond marquee top plate. Connect 3 connectors; Install the Diamond marquee top plate back.

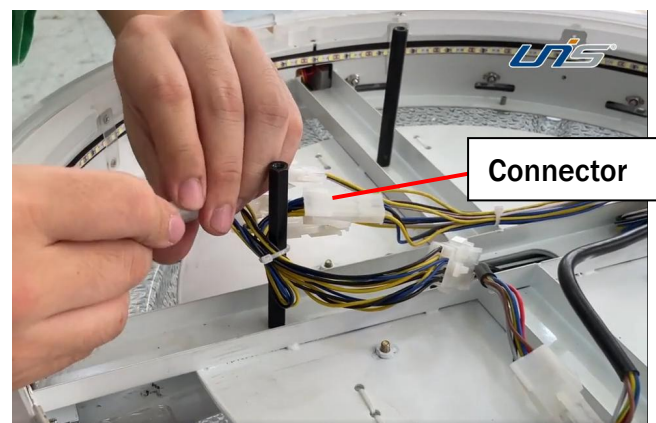


Step 7 Open the ticket roll carton and put all the ticket rolls to the Cabinet.

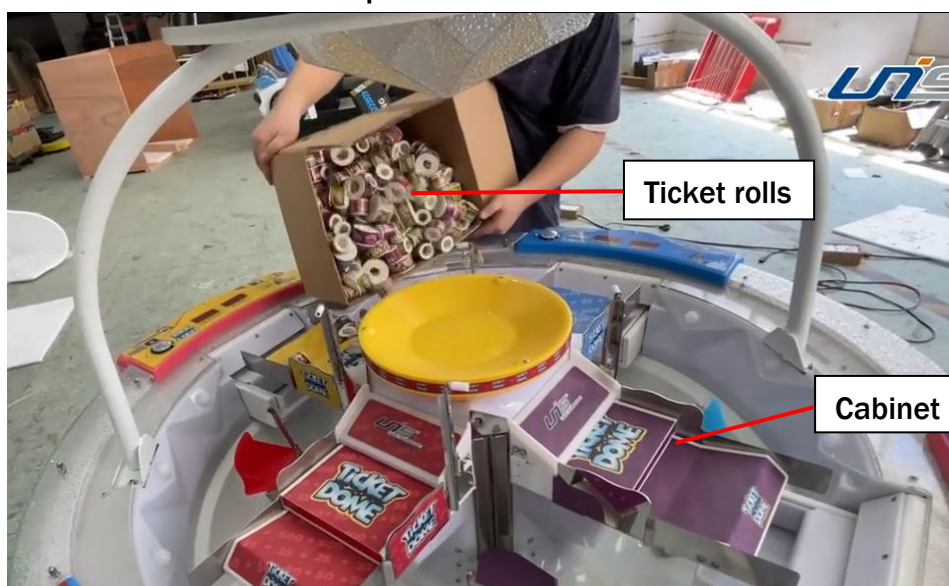

Step 8 Loosen screws to remove the Cover plate.




Step 9 Place Cover on the cabinet. Install Cover plate to the Cover. Utilize socket wrench to tighten the screws on each side.

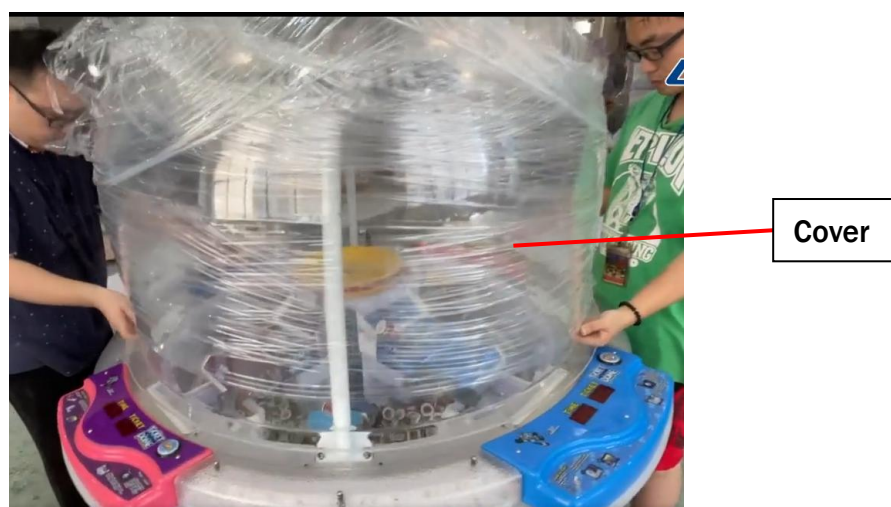

Step 10 Pls follow the instructions of IO Chart to set Game Mode for the cabinet.(Refer to 4.4 Instruction of Resetting The Machine to Normal Mode)

5. HOW TO PLAY

- 1 Please insert coin(s) /swipe/tap card to play.
- 2 Aim at ticket rolls and press Button to scoop.
- 3 Ticket rolls drop down to be collected.
- 4 Ticket rolls will activate BONUS mode.
- 4 Press Button to stop the spinning light and try to land on “Win BONUS” for more prizes!

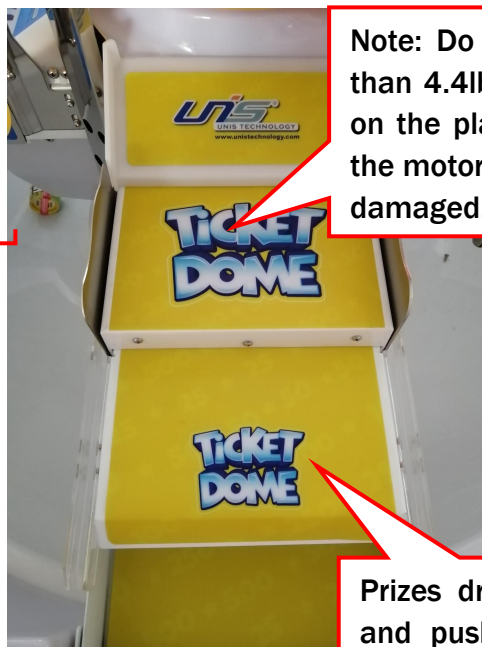

Note: Do not put more than 4.4lb prizes totally on the plate. Otherwise the motor will be damaged.

Prizes drop down and push to win more prizes.

6. GAME OPTION

6.1 Ticket Dome I/O chart:

Item	Value	SW1							
		1	2	3	4	5	6	7	8
Coin Per Game*	1/4	off	off	off					
	1/3	on	off	off					
	1/2	off	on	off					
	1/1	on	on	off					
	2/1	off	off	on					
	3/1	on	off	on					
	4/1	off	on	on					
	5/1	on	on	on					
Coin Per Game**: Set how many coins to play. Eg. "1/4" means 1 coin for 4 plays; "5/1" means 5 coins for 1 play.									
Bonus Dish Refill**	4				off	off			
	8				on	off			
	12				off	on			
	16				on	on			
Bonus Dish Refill**: After winning the bonus dish, the machine will automatically start to refill the dish with ticket rolls. You can set this to the following Setting 4: each of the scoops will try once Setting 8: each of the scoops will try twice Setting 12: each of the scoops will try 3 times Setting 16: each of the scoops will try 4 times									
Demo Music	NO						off		
	YES						on		
Game Mode	Normal							off	off
	Free Play							on	off
	Normal							off	on
	Factory Restore							on	on

Item	Value	SW2							
		1	2	3	4	5	6	7	8
BONUS Odds	3%	off	off						
	5%	on	off						
	10%	off	on						
	20%	on	on						
Wait Time (second) to Start Auto Play	Wait all the time			off	off				
	20			on	off				
	25			off	on				
	30			on	on				
						OFF	OFF	OFF	OFF

Item	Value	Controller							
		1	2	3	4	5	6	7	8
Stepping Motor	Setting	off	off	off	off	off	off	off	on

Main board input:				Extension board input			
INPUT	Content	INPUT	Content	INPUT	Content	INPUT	Content
J1-1 (1)	1P Coin mechanism	J1-9 (9)	2P Coin mechanism	J7-1 (1)	3P Coin mechanism	J7-9 (9)	4P Coin mechanism
J1-2 (2)	1P Button	J1-10 (10)	2P Button	J7-2 (2)	3P Button	J7-10 (10)	4P Button
J1-3 (3)		J1-11 (11)		J7-3 (3)		J7-11 (11)	
J1-4 (4)		J1-12 (12)		J7-4 (4)		J7-12 (12)	
J1-5 (5)	1P Reset button	J1-13 (13)	2P Reset button	J7-5 (5)	3P Reset button	J7-13 (13)	4P Reset button
J1-6 (6)	1P Service button	J1-14 (14)	2P Service button	J7-6 (6)	3P Service button	J7-14 (14)	4P Service button
J1-7 (7)	Tilt alarm R	J1-15 (15)		J7-7 (7)		J7-15 (15)	Dome Up
J1-8 (8)		J1-16 (16)		J7-8 (8)		J7-16 (16)	Dome Down

Main board output:					
OUTPUT	Content	OUTPUT	Content	OUTPUT	Content
J2-1 (1)		J3-9 (9)	1P Coin mechanism GND	J7-1 (17)	1P Coin counter
J2-2 (2)		J3-10 (10)	2P Coin mechanism GND	J7-2 (18)	2P Coin counter
J2-3 (3)		J3-11 (11)	3P Coin mechanism GND	J7-3 (19)	3P Coin counter
J2-4 (4)		J3-12 (12)	4P Coin mechanism GND	J7-4 (20)	4P Coin counter
J2-5 (5)		J3-13 (13)		J7-5 (21)	1P Button light
J2-6 (6)		J3-14 (14)		J7-6 (22)	2P Button light
J2-7 (7)		J3-15 (15)		J7-7 (23)	3P Button light
J2-8 (8)		J3-16 (16)		J7-8 (24)	4P Button light

Sub board input:				Extension board input:			
INPUT	Content	INPUT	Content	INPUT	Content	INPUT	Content
J1-1 (1)	1P Claw depth SW	J1-9 (9)	3P Claw depth SW	J1-1 (1)	Turntable zero sensor	J1-9 (9)	
J1-2 (2)	1P Scoop upper sensor	J1-10 (10)	3P Scoop upper sensor	J1-2 (2)		J1-10 (10)	
J1-3 (3)	1P Scoop lower sensor	J1-11 (11)	3P Scoop lower sensor	J1-3 (3)		J1-11 (11)	
J1-4 (4)		J1-12 (12)		J1-4 (4)		J1-12 (12)	
J1-5 (5)	2P Claw depth SW	J1-13 (13)	4P Claw depth SW	J1-5 (5)		J1-13 (13)	
J1-6 (6)	2P Scoop upper sensor	J1-14 (14)	4P Scoop upper sensor	J1-6 (6)		J1-14 (14)	
J1-7 (7)	2P Scoop lower sensor	J1-15 (15)	4P Scoop lower sensor	J1-7 (7)		J1-15 (15)	
J1-8 (8)		J1-16 (16)		J1-8 (8)		J1-16 (16)	

Sub board output:				Extension board output:			
OUTPUT	Content	OUTPUT	Content	OUTPUT	Content	OUTPUT	Content
J2-1 (1)	1P Lift motor A	J3-1 (9)	3P Lift motor A	J1-1 (1)	Pusher Motor A	J1-1 (1)	2P Light
J2-2 (2)	1P Lift motor B	J3-2 (10)	3P Lift motor B	J1-2 (2)	Pusher Motor B	J1-2 (2)	3P Light
J2-3 (3)	1P Scoop motor A	J3-3 (11)	3P Scoop motor A	J1-3 (3)	1# Scoop light	J1-3 (3)	4P Light
J2-4 (4)	1P Scoop motor B	J3-4 (12)	3P Scoop motor B	J1-4 (4)	2# Scoop light	J1-4 (4)	
J2-5 (5)	2P Lift motor A	J3-5 (13)	4P Lift motor A	J1-5 (5)	3# Scoop light	J1-5 (5)	
J2-6 (6)	2P Lift motor B	J3-6 (14)	4P Lift motor B	J1-6 (6)	4# Scoop light	J1-6 (6)	
J2-7 (7)	2P Scoop motor A	J3-7 (15)	4P Scoop motor A	J1-7 (7)	Stepping motor EN	J1-7 (7)	
J2-8 (8)	2P Scoop motor B	J3-8 (16)	4P Scoop motor B	J1-8 (8)	1P Light	J1-8 (8)	

Separate port J5:	Main board
PROT	Content
5V	
12V	
GND	
P10	
P11	
P12	RXD
P13	TXD

Separate port:	Sub board
PROT	Content
5V	
12V	
GND	
P10	Light ring SCK
P11	Light ring RCK
P12	Light ring SI
P13	Stepping motor CP

LED display:	Time	Ticket
LED:	1,2,3 bit	4,5,6,7 bit
	8,9,10 bit	11,12,13,14 bit
	15,16,17 bit	18,19,20,21 bit
	22,23,24 bit	25,26,27,28 bit

Error code:	
E01	Scoop upper sensor error
E02	Scoop lower sensor error
Add	Scoop Micro Switch error
E04	Tilt alarm
E07	Stepping motor zero sensor
E08	Communication error

Memory clear:	Press "TEST" and "SERVICE" button to restart the machine to clear memory.
---------------	---

Note: Please reset the machine to Normal mode after removing the packing. (Refer to Instruction of Resetting The Machine to Normal Mode)

6.2 Ticket Dome R I/O Chart

6.2.1 M3_MB.PCB board

Input: J20							
INPUT	Content	INPUT	Content	INPUT	Content	INPUT	Content
IN1		IN9	1#Gate motor initial	IN17	Switch DIP1	J25-T1_IN	1#Ticket feedback
IN2		IN10	2#Gate motor initial	IN18	Switch DIP2	J25-T2_IN	2#Ticket feedback
IN3		IN11	3#Gate motor initial	IN19	Switch DIP3		
IN4		IN12	4#Gate motor initial	IN20	Switch DIP4		
IN5	1#Ticket reset	IN13		IN21	Switch DIP5		
IN6	2#Ticket reset	IN14		IN22	Switch DIP6		
IN7	3#Ticket reset	IN15	3#Ticket feedback	IN23	Switch DIP7		
IN8	4#Ticket reset	IN16	4#Ticket feedback	IN24	Switch DIP8		

Output: J21		J22		J23		J25	
OUTPUT	Content	OUTPUT	Content	OUTPUT	Content	OUTPUT	Content
OUT1	1#Gate motor A	OUT9	1#Ticket meter	OUT17			
OUT2	2#Gate motor A	OUT10	2#Ticket meter	OUT18		J25-T2_OUT	2#Ticket drive
OUT3	3#Gate motor A	OUT11	3#Ticket meter	OUT19	3#Ticket drive	J25-T1_OUT	1#Ticket drive
OUT4	4#Gate motor A	OUT12	4#Ticket meter	OUT20	4#Ticket drive		
OUT5	1#Pusher Motor	OUT13	1#Gate motor B	OUT21	1#Out of ticket light		
OUT6	2#Pusher Motor	OUT14	2#Gate motor B	OUT22	2#Out of ticket light		
OUT7	3#Pusher Motor	OUT15	3#Gate motor B	OUT23	3#Out of ticket light		
OUT8	4#Pusher Motor	OUT16	4#Gate motor B	OUT24	4#Out of ticket light		

6.2.2 ZKL_HANDLE_MB.PCB board

J13		J14		J15		J16	
	Content		Content		Content		Content
12V		12V		12V		12V	
5V		5V		5V		5V	
GND		GND		GND		GND	
TX	P1 Serial port 3 pin	TX	P2 Serial port 3 pin	TX	P3 Serial port 3 pin	TX	P4 Serial port 3 pin
RX	P1 Serial port 2 pin	RX	P2 Serial port 2 pin	RX	P3 Serial port 2 pin	RX	P4 Serial port 2 pin
GND	P1 Serial port 5 pin	GND	P2 Serial port 5 pin	GND	P3 Serial port 5 pin	GND	P4 Serial port 5 pin

Switch Setting: SW1

Content	Parameter	DIP1	DIP2	DIP3	DIP4
BONUS Mode Activate*	≥1 roll per game	ON	ON		
	≥2 roll per game	off	on		
	≥3 roll per game	on	off		
	≥4 roll per game	off	off		
Ticket	Ticket				ON
	No ticket				off
Antenna Test	Test Mode**			ON	
	Game Mode			OFF	

*When Ticket detect assembly detect the ticket roll will activate BONUS mode.

**When Test Mode is on, place a ticket roll on the Ticket Detect Assembly. Move the ticket roll around; if the display shows "C-1" "C-2" "C-3" "C-4", it means 4 antennas are all connected well.

Communication:

Item	Content
COM1	
USB	

Separate port:

COM(J12)	RX	Communication 1
	TX	Communication 2
	GND	Communication GNG

Error Code:

E11	Reader abnormal
E12	Ticket detect assembly moving abnormal

Separate port:

Item	Content	Content
IIC(J14)	5V	
	SDA	Ticket dome RXD
	SCL	Ticket dome TXD
	GND	GND
PWM1-6 (J15)	GND	
	PWM1	
	PWM2	
	PWM3	
	PWM4	
	PWM5	
	PWM6	
	12V	
COM(J11)	TX	Communication 1
	RX	Communication 2
	GND	Communication GNG

7. TROUBLESHOOTING

7.1 Common Problem

Please confirm whether every connector connected tightly.

Symptom	Possible Cause	Recommended action
Game will not start	Frame assembly connector is loose.	Plug the connector tightly.
	Frame assembly fault	Contact with UNIS Service.
Power cutting	Circuit protector make power SW in cutting state	Turn on power SW again. If appeared again and again, machine has anomaly. Please contact with UNIS Service.
Game will not coin up	Coin mechanism fault or sample coin not installed.	Change coin mechanism or sample coin.
	Coin mechanism signal cable loose.	Check coin mechanism signal cable loose.
	IO control board no signal.	Change IO board.
No sound	Volume set too low.	Raise the volume.
	Connector loose.	Plug in connector tightly.
	PCB fault.	Change PCB.
	Speaker fault.	Change speaker.
	POT installation error.	Install POT correctly.
	POT fault.	Change POT.
	Audio cable problem.	Reconnect the audio cable or change it.
	Driver problem	Restart the audio driver.

8. MAINTENANCE & INSPECTION

8.1 Safety Check

Check the points listed before operating the machine. These checks are necessary for safe machine operation:

1. Test game before operation each day.
2. Conduct monthly routine checks of game components ensure good working condition
3. Check the machine regularly for dust and clean when necessary.

Note: Parts and components require preventative maintenance to maintain proper operation.



NOTICE

We do not recommend using power tools as they may cause damage.

8.2 Mechanism Maintenance Instruction

Before processing the following operation assure you have the following tools.


No.	Name	SPEC.	Qty.	Picture
1	Phillips screwdriver	/	1	
2	Allen wrench	2.5mm	1	
3	Spanner	5.5/7	1	

Note: Place the game on a flat surface. Adjust levelers to lift casters off the ground to level the game.


How to Remove The Dome Cover Before Maintenance

Step 1 Power on the machine. Open the service door between Purple player and Blue player. Turn the Switch to UP side to raise the dome up.

Note: If the machine is not power on successfully. Pull the Shut off switch out and power on the machine again.

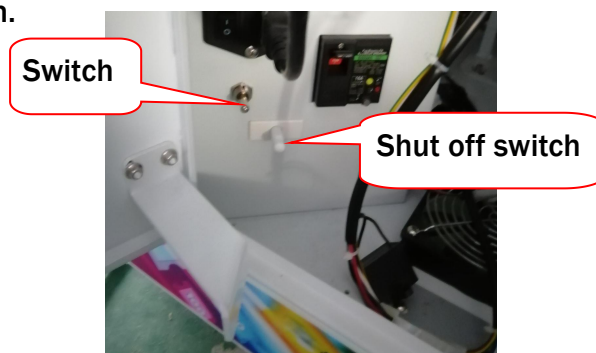

Step 2 Utilize Spanner(5.5/7) to remove 8 nuts from the metal plate and take the dome out.

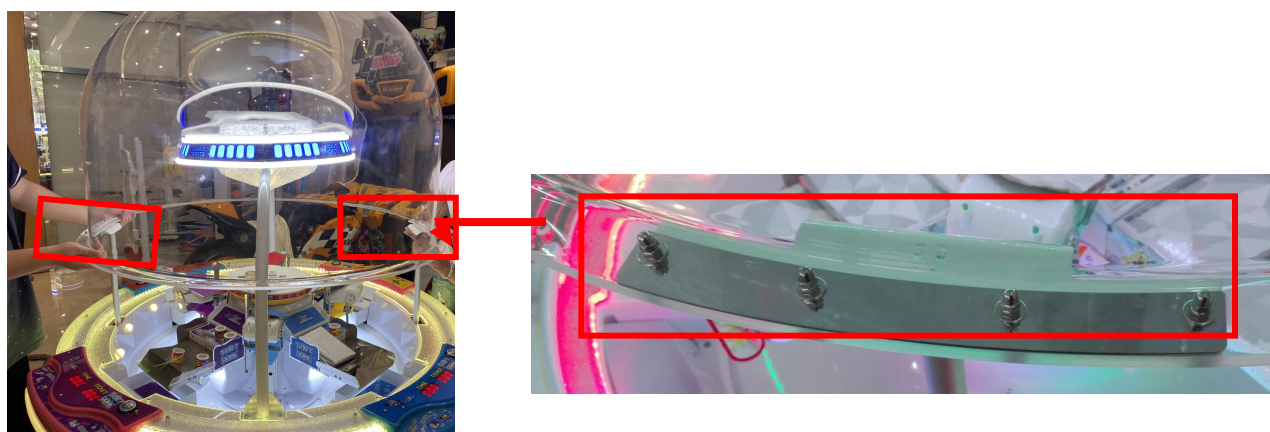


Step 3 Turn the Switch to DOWN side to raise the bracket down.

IMPORTANT NOTE



All repairs must be done to original manufacturer specifications. Failure to do so void all warranties and operator assume all risks.

8.2.1 Scoop Upper Sensor Replacement Instruction (E01 Error)

Step 1 Locate the scoop. Utilize Phillips screwdriver to loosen the screws as shown below.

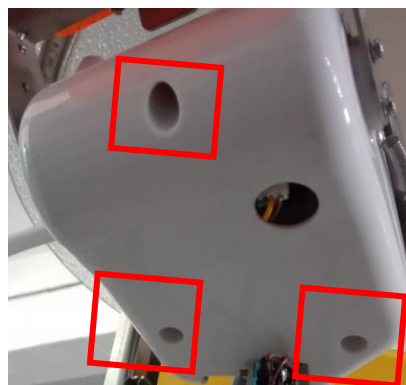


Step 2 Open the Scoop upper shell. Locate the Upper sensor. Unplug the connector. Utilize Phillips screwdriver to loosen the screw to remove Upper sensor.

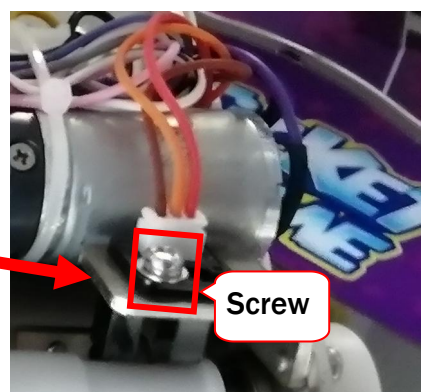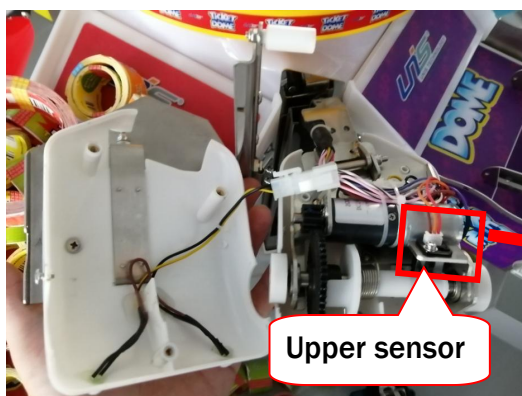


Step 3 Replace it with new Upper sensor and install it in reversed order.

8.2.2 Scoop Bottom Sensor Replacement Instruction (E02 Error)


Step 1 Locate the scoop. Utilize Phillips screwdriver to loosen the screws as shown below.

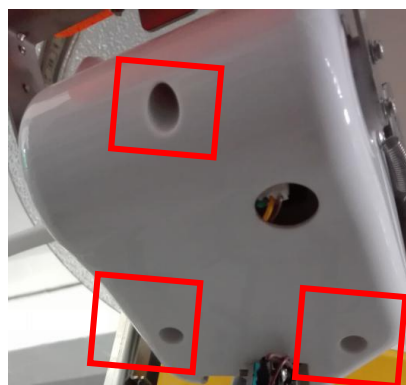

Step 2 Open the Scoop upper shell. Utilize Phillips screwdriver to loosen 2 screws to remove Scoop electrical assembly.

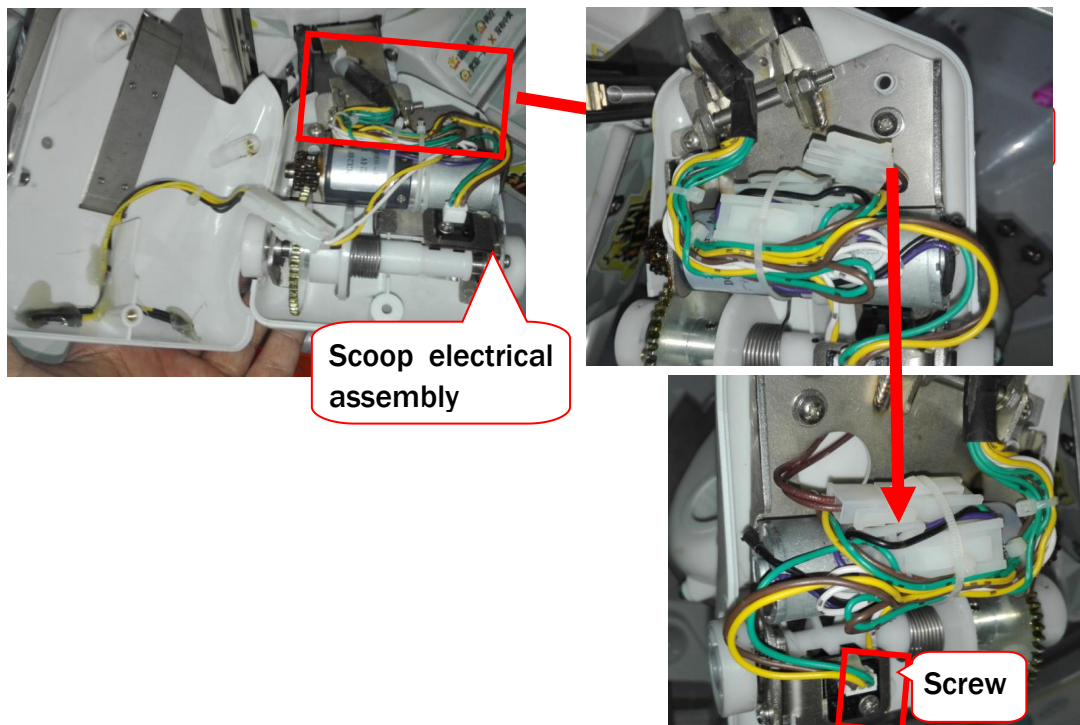

Step 3 Locate the Bottom sensor. Unplug the connector. Utilize Phillips screwdriver to loosen the screw to remove Bottom sensor.

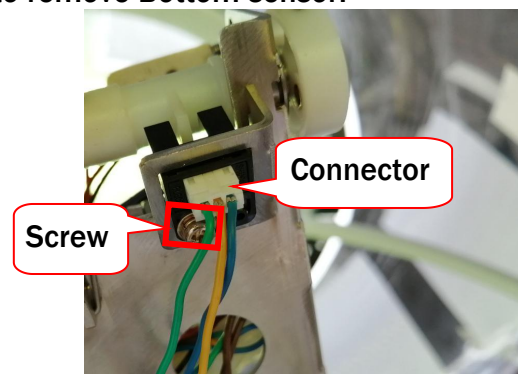


Step 4 Replace it with new Bottom sensor and install it in reversed order.

8.2.3 Scoop Micro Switch Replacement Instruction (ADD Error)


Step 1 Locate the scoop. Utilize Phillips screwdriver to loosen the screws as shown below.




Step 2 Open the Scoop upper shell. Unplug the Scoop micro switch connector.

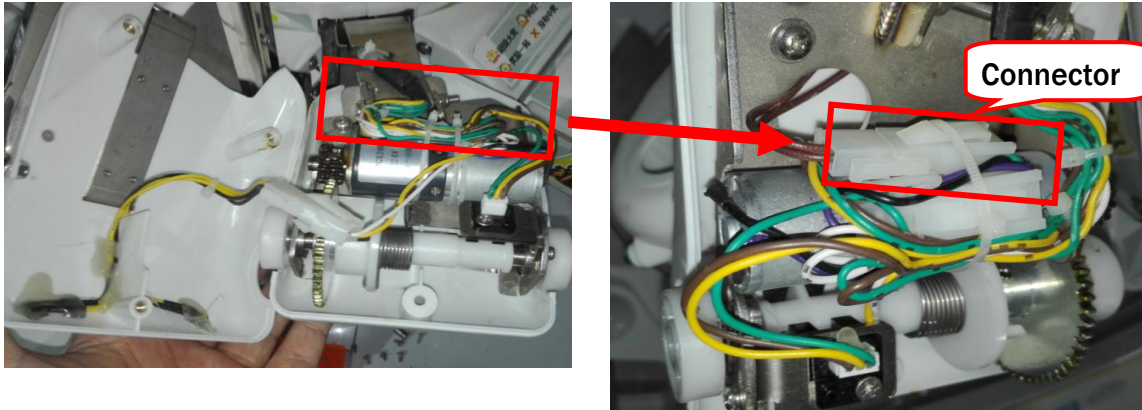

Step 3 Utilize Phillips screwdriver to loosen Left side screw. Utilize Phillips screwdriver and Spanner to loosen Right side screw.

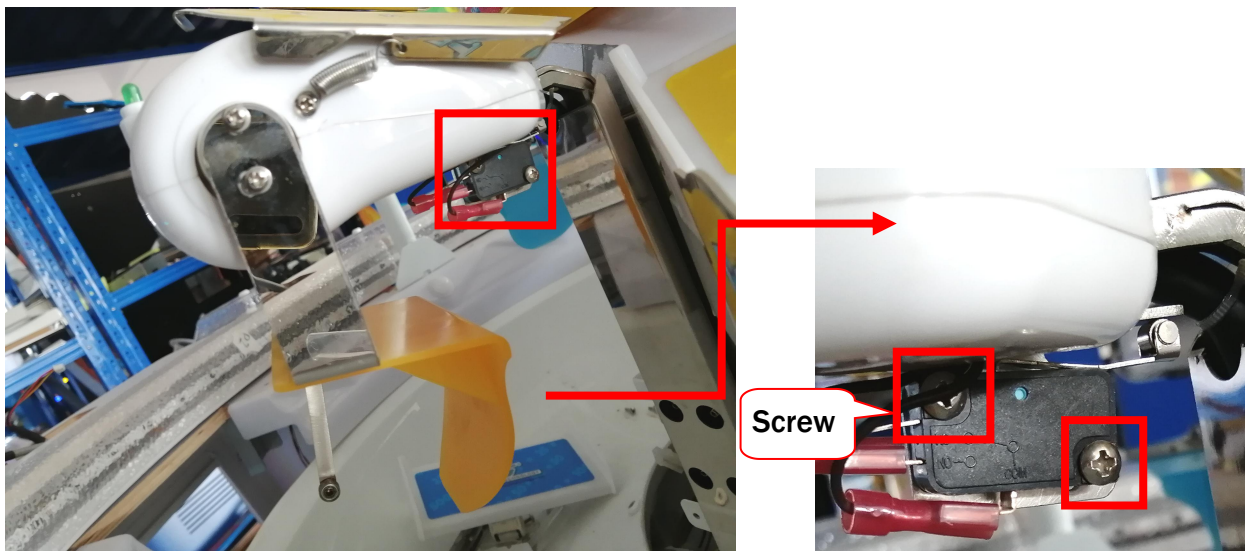


Step 4 Loosen the nut.

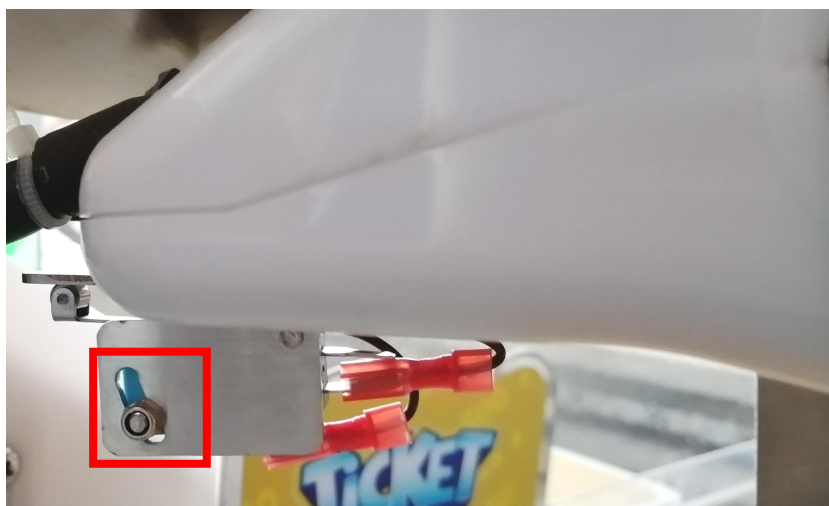


Step 5 Replace it with new Scoop micro switch and install it in reversed order.

8.2.4 Scoop Motor Replacement Instruction



Step 1 Locate the scoop. Utilize Phillips screwdriver to loosen the screws as shown below.

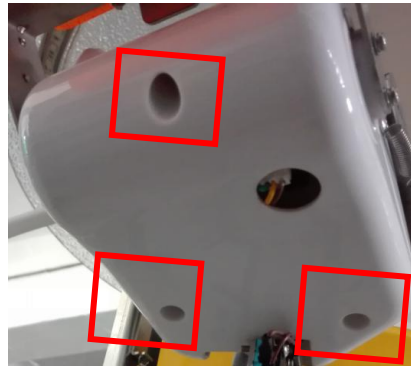

Step 2 Unplug the Scoop motor connector.

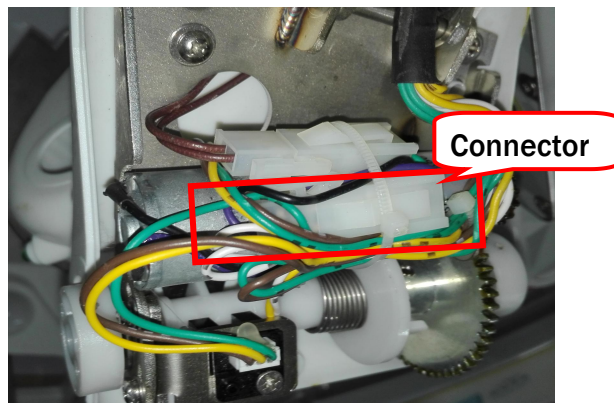

Step 3 Utilize Allen wrench(2.5mm) to loosen 2 screws to remove Gear. Utilize Phillips screwdriver to loosen 3 screws to remove Scoop motor.

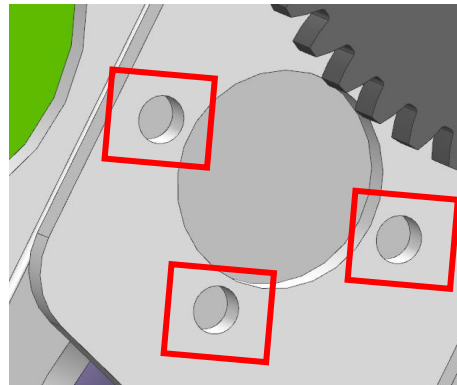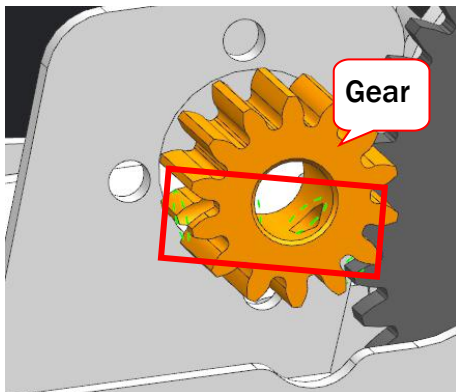


Step 4 Replace it with new Scoop motor and install it in reversed order.

8.2.5 Pusher Motor Replacement Instruction


Step 1 Utilize Phillips screwdriver to loosen 4 screws to remove Middle cover.




Step 2 Unplug the Pusher motor connector. Utilize Spanner(5.5/7) to loosen 4 nuts to remove Pusher motor assembly.

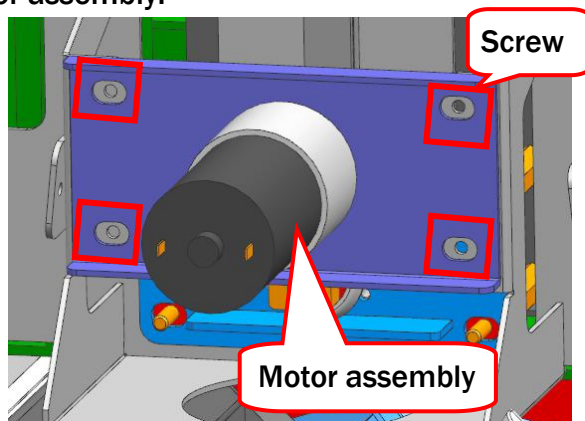

Step 3 Utilize Allen wrench(2.5mm) to loosen 2 screws to remove Pushing crank.

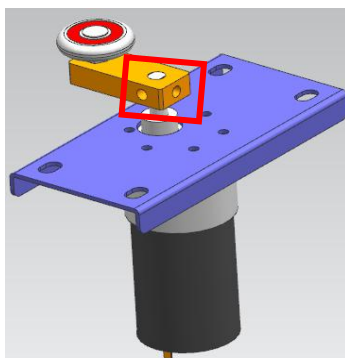

Step 4 Utilize Phillips screwdriver to loosen 6 screws to remove Pusher motor.

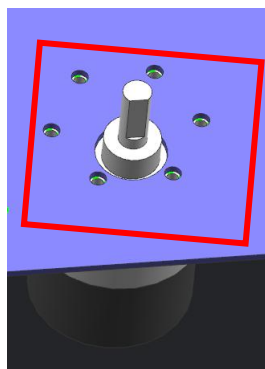


Step 5 Replace it with new Pusher motor and install it in reversed order.

8.2.6 Pusher Sensor Replacement Instruction

Step 1 Take the BONUS Prize plate off.



Step 2 Locate the Pusher sensor. Unplug the connector. Utilize Phillips screwdriver to loosen screw to remove Pusher sensor.

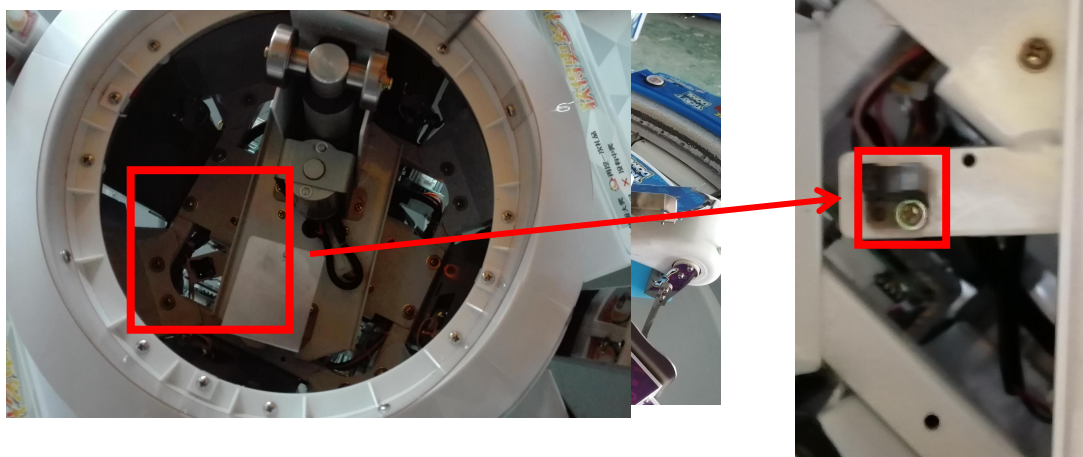

Step 3 Replace it with new Pusher sensor and install it in reversed order.




8.2.7 Scoop Depth Adjustment

Step 1 Utilize Phillips screwdriver to loosen 2 screws to adjust the depth probe.



Step 2 Utilize Phillips screwdriver to loosen the left screw.

Utilize Phillips screwdriver and Spanner to loosen the right screw and nut.

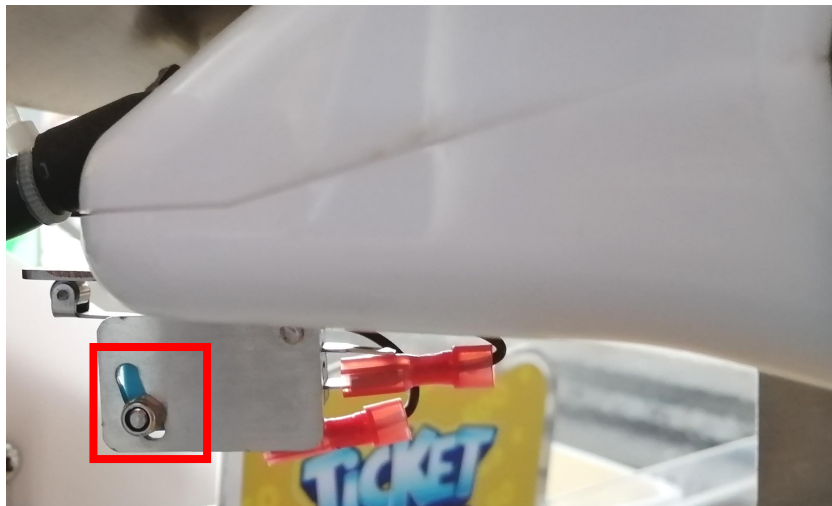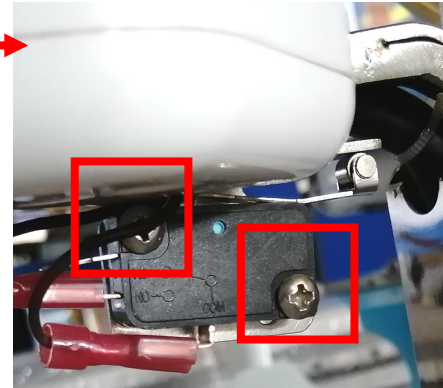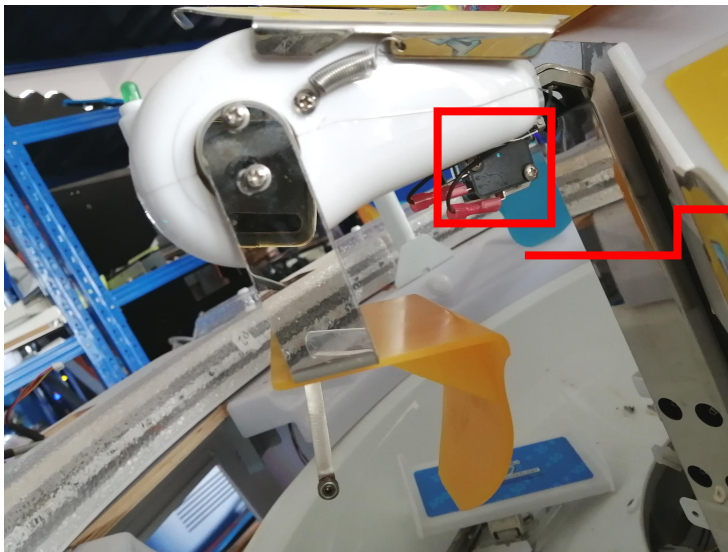



Step 3 Adjust the Micro switch. Tight the screws and nut back after adjustment.

8.2.8 Push Rod Motor Replacement

Step 1 Open the service door between Purple player and Blue player. Power on the machine. Turn the Switch to UP side.




Step 2 Utilize Phillips screwdriver to loosen 2 screws and cotter pins to remove Cover.

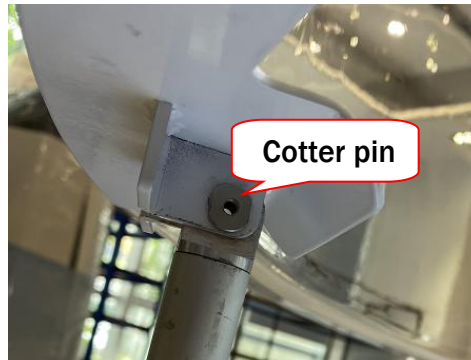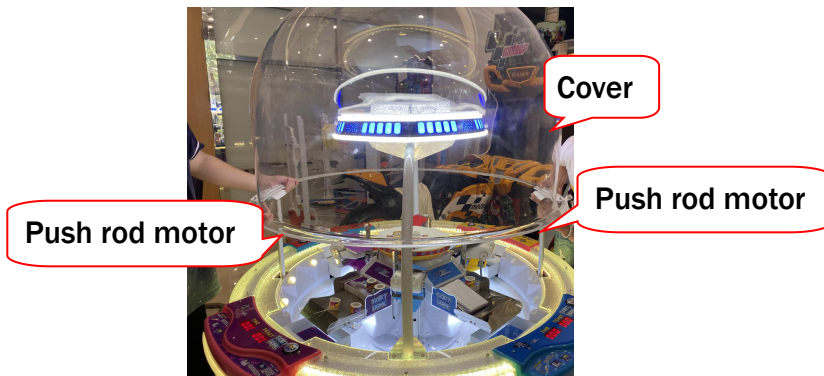


Step 3 Locate the service door. Turn the Switch to DOWN side. Power off the machine.



Step 4 Open the Push Rod bottom door. Locate the Rush rod motor. Unplug the motor connector.

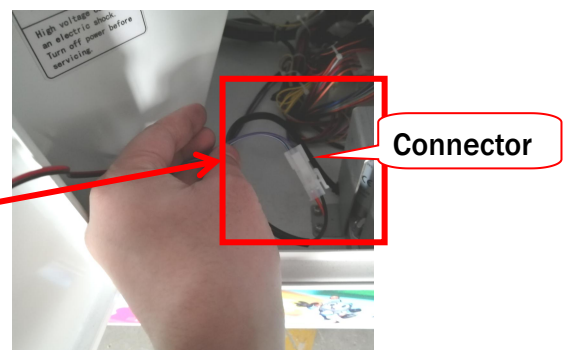

Step 5 Utilize Phillips screwdriver to loosen 4 screws to remove Push rod plate.

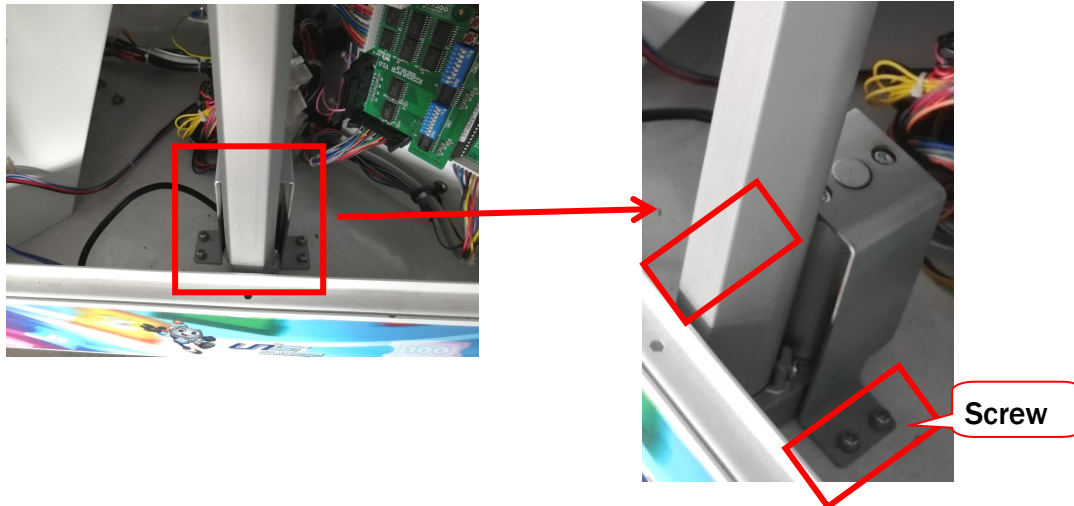


Step 6 Utilize Phillips screwdriver to loosen 2 screws to remove Push Rod Motor.




Step 7 Replace it with new Push Rod Motor and install it in reversed order.

8.2.9 Ticket Dome IO Board Replacement

Step 1 Open the service door. Unplug IO Board connector.

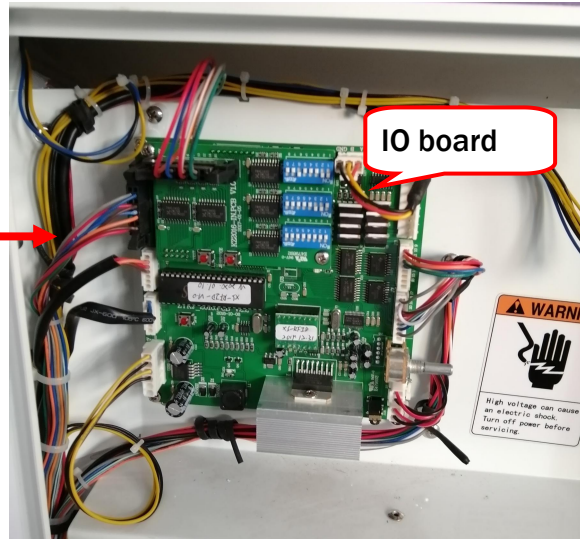


Step 2 Utilize Phillips screwdriver to loosen 4 screws to remove Main board.

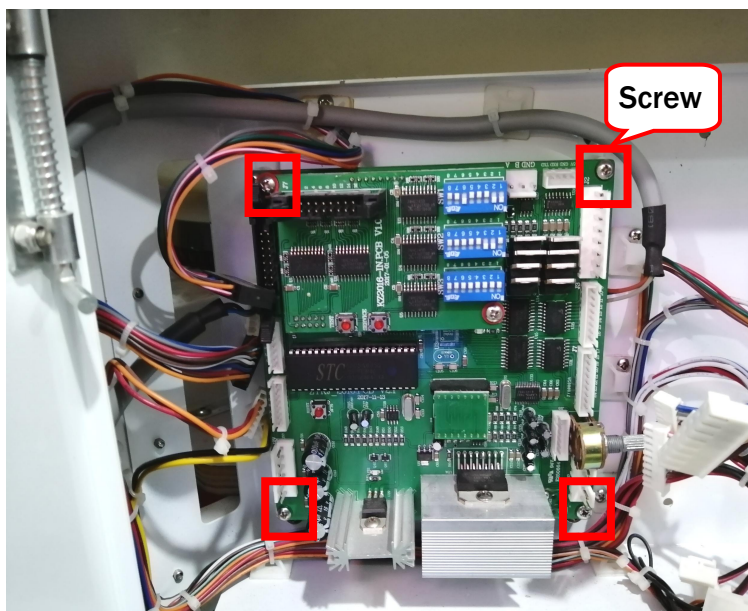


Step 3 Replace it with new IO Board and install it in reversed order.

8.2.10 Ticket Dome R IO Board Replacement

Step 1 Open the service door. Unplug IO Board connector.

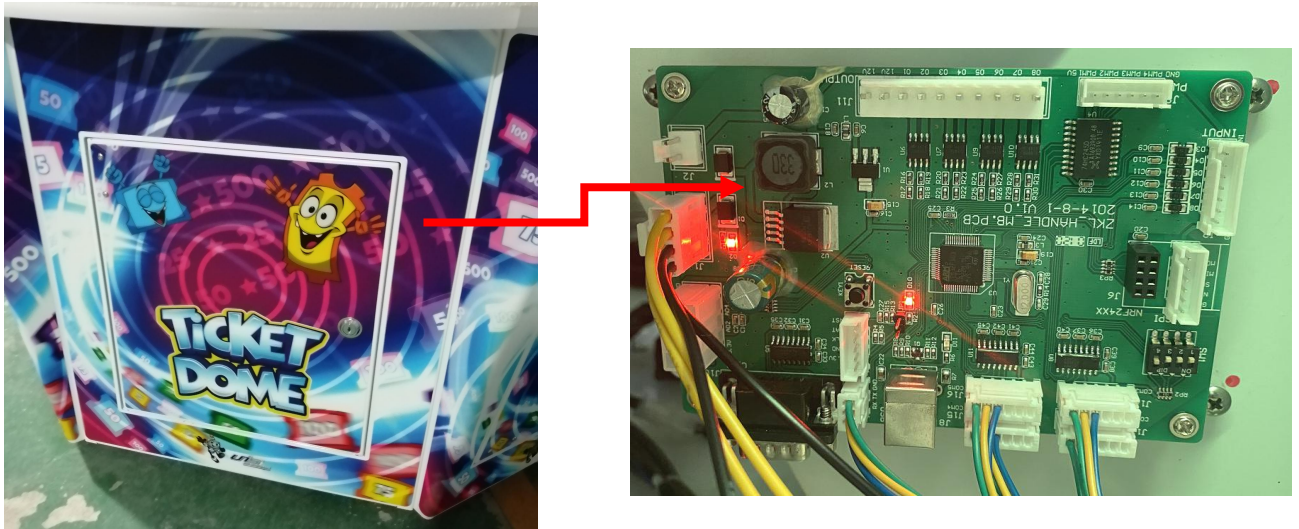

Step 2 Utilize Phillips screwdriver to loosen 4 screws to remove IO board.

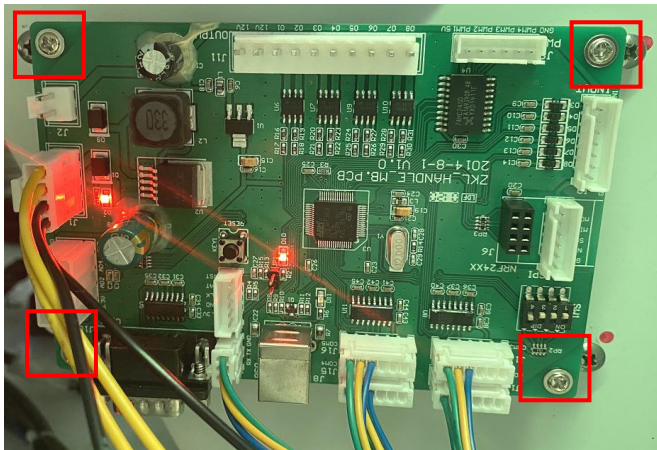

Step 3 Replace it with new IO board and install it in reversed order.

8.2.11 Reader Replacement


Step 1 Open the coin door and locate Reader.




Step 2 Loosen 4 cables counterclockwise.



Step 3 Utilize Phillips screwdriver to loosen 4 screws to remove Reader.

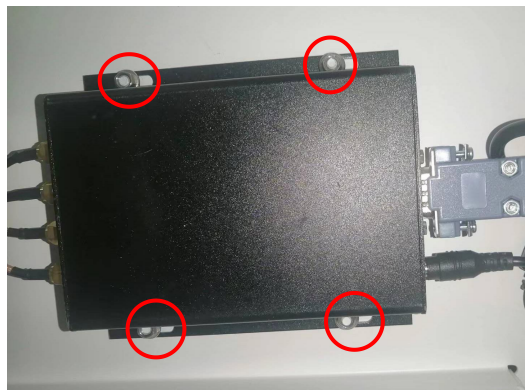


Step 4 Utilize Phillips screwdriver to loosen 2 screws to remove Reader power cord. Remove cable.

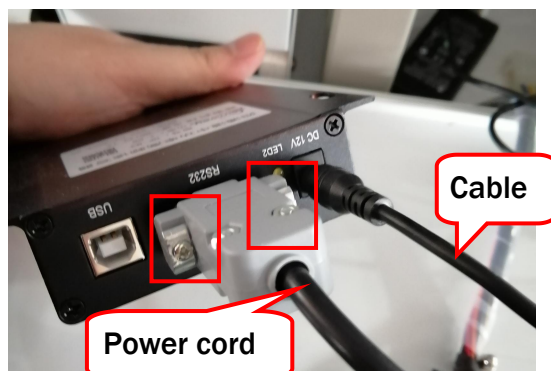

Step 5 Replace it with new Reader and install it in reversed order.


9. OVERALL CONSTRUCTION

9.1 Prize Pushing Assembly

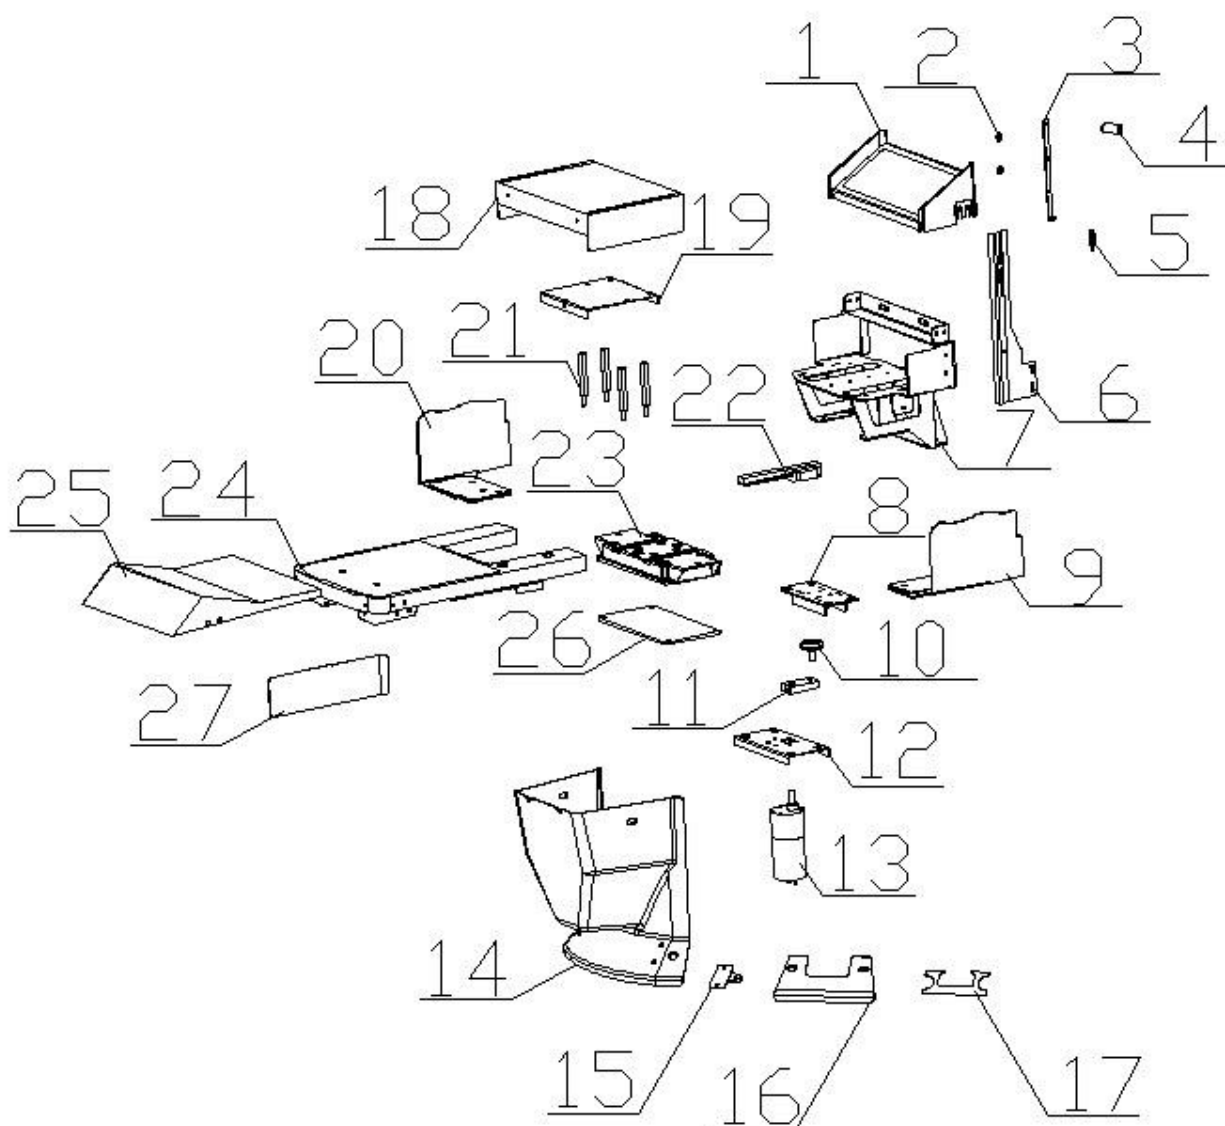

No.	Part No.	Drawing NO.	Name	Qty
1	T151-270-000	PQXS-2304	Sliding cover	4
2	T151-221-000	PQXS-2312	Pulley	8
3	T151-171-000	PQXS-2319	Pressing rod B	4
4	T151-222-000	PQXS-2314	Pressing rod wheel	4
5	T151-265-000	PQXS-2313	Pressing rod spring	4
6	T151-172-000	PQXS-2320	Pressing rod A	4
7	T151-167-000	PQXS-2303	Pushing bracket	4
8	T151-169-000	PQXS-2316	Sliding block	4
9	T151-174-000	PQXS-2323	R baffle	4
10	T151-482-000	PQXS-WG-20	Bearing	4
11	T151-246-000	PQXS-2302	Pushing crank	4
12	T151-168-000	PQXS-2315	Motor mounting plate	4
13	T151-470-000	PQXS-WG-08	Pusher motor	4
14	T151-239-000	PQXS-2001	Middle cover	4
15	T151-143-000	PQXS-2006	Screw plate	8
16	T151-267-000	PQXS-2002	U type plate	4
17	T151-145-000	PQXS-2008	U type pressing plate	4
18	T151-272-000	PQXS-2321	Top pushing plate	4
19	T151-170-000	PQXS-2318	Sliding plate	4
20	T151-173-000	PQXS-2322	L baffle	4
21	T151-223-000	PQXS-2317	Pushing support plate	16
22	T151-474-000	PQXS-WG-12	Track(with bearing)	4
23	T151-271-000	PQXS-2306	Pusher bottom light bracket	4
24	T151-273-000	PQXS-2324	Bottom pushing plate	4
25	T151-166-000	PQXS-2301	Pusher plate	4
26	T151-256-000	PQXS-2309	Pusher bottom light cover	4
27	T151-197-000	PQXS-2307	Pusher side plate	8


9.2 Scoop Assembly

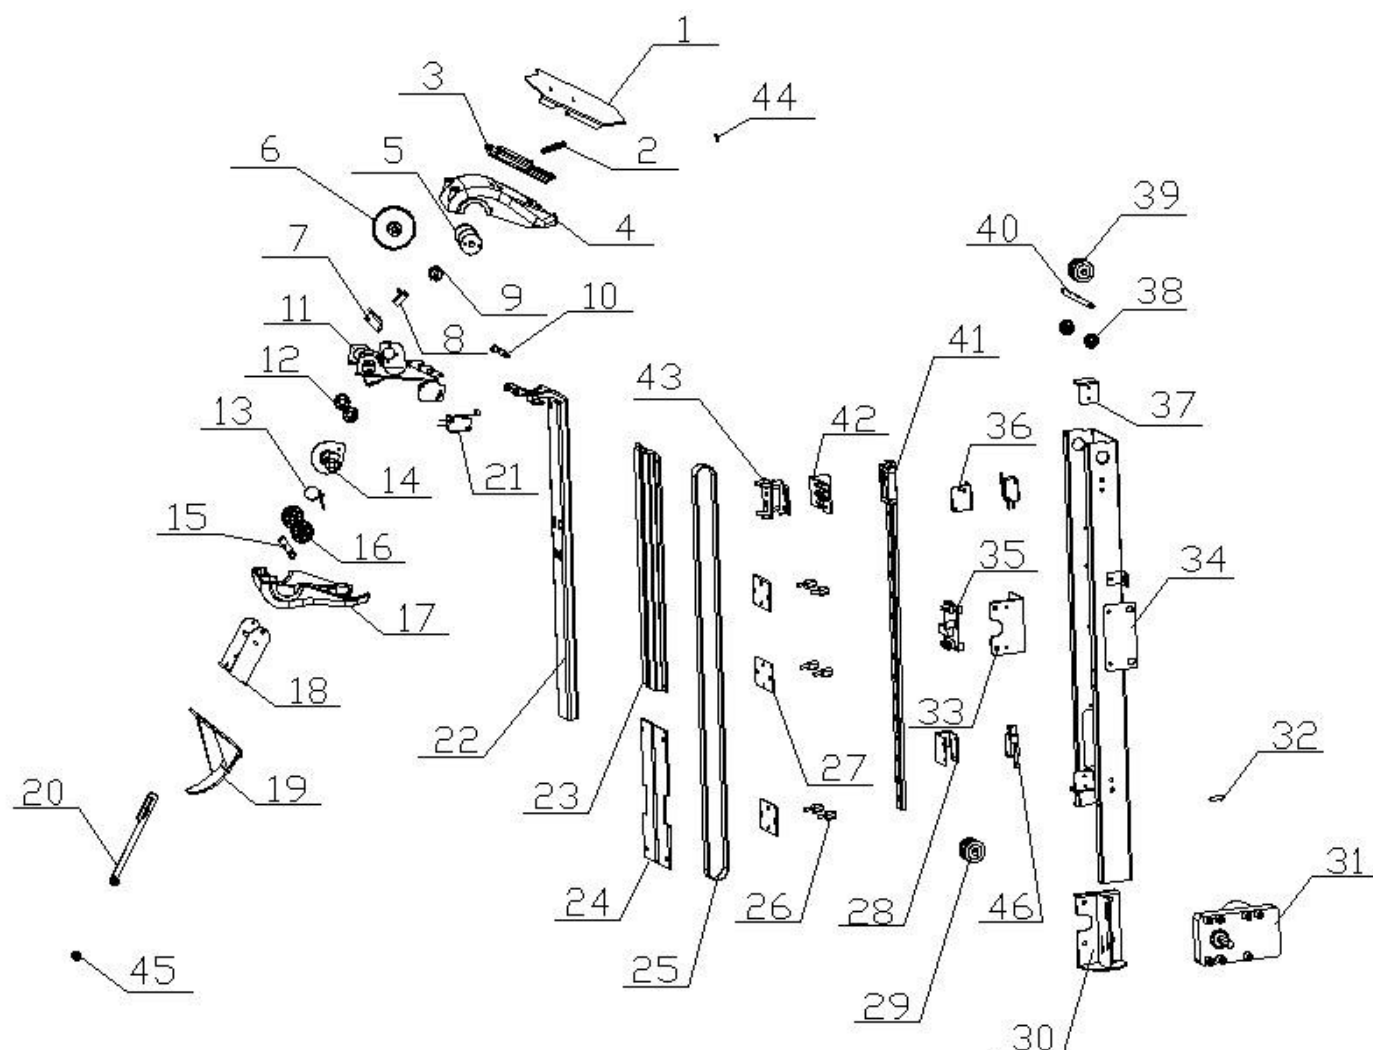

No.	Part No.	Drawing No.	Name	Qty
1	T151-178-000	PQXS-2413	Pallet	4
2	T151-264-000	PQXS-2418	Spring	4
3	T151-177-000	PQXS-2412	Pallet plate	4
4	T151-278-000	PQXS-2411	Scoop upper cover	4
5	T151-469-000	PQXS-WG-07	Scoop Motor	4
6	T151-232-000	PQXS-2406	Wheel gear B	4
7	T151-179-000	PQXS-2420	Upper scoop coupler plate	4
8	T151-463-000	PQXS-WG-01	Optical coupler	8
9	T151-233-000	PQXS-2408	Wheel gear A	4
10	T151-219-000	PQXS-2212	Scoop axle	4
11	T151-175-000	PQXS-2401	Scoop bracket	4
12	T151-495-000	PQXS-WG-33	Bearing	8
13	T151-262-000	PQXS-2313	Scoop spring	4
14	T151-274-000	PQXS-2404	Scoop shaft	4
15	T151-224-000	PQXS-2402	Scoop axle	4


No.	Part No.	Drawing No.	Name	Qty
16	T151-225-000	PQXS-2405-1	Scoop separate plate	4
17	T151-277-000	PQXS-2410	Scoop bottom cover	4
18	T151-176-000	PQXS-2403	Scoop arm	4
19	T151-276-000	PQXS-2409	Scoop	4
20	T151-105-000	PQXS-2407-1	Depth pin	4
21	T151-476-000	PQXS-WG-14	Scoop micro Switch	4
22	T151-156-000	PQXS-2207	Scoop vertical plate	4
23	T151-162-000	PQXS-2215	Up-down cover plate	8
24	T151-255-000	PQXS-2216	Up-down plate	8
25	T151-497-000	PQXS-WG-35	Belt	4
26	T151-220-000	PQXS-2213	Track column	24
27	T151-154-000	PQXS-2205	Guide rail plate	4
28	T151-158-000	PQXS-2209	Bottom plate	4
29	T151-231-000	PQXS-2204	Driver	4
30	T151-163-000	PQXS-2218	Motor bracket	4
31	T151-467-000	PQXS-WG-05	Scoop assembly motor	4
32	T151-425-000	PQXS.DQ-25	Diode	8
33	T151-160-000	PQXS-2211	Support plate	4
34	T151-153-000	PQXS-2201	Side mounting plate	4
35	T151-404-000	PQXS.DQ-04	Motor control board	4
36	T151-157-000	PQXS-2208	Upper plate	4
37	T151-159-000	PQXS-2210	Limit blocking pin	8
38	T151-494-000	PQXS-WG-32	Bearing	8
39	T151-230-000	PQXS-2203	Up-down wheel	4
40	T151-218-000	PQXS-2202	Upper axle	4
41	T151-473-000	PQXS-WG-11	Track	4
42	T151-165-000	PQXS-2220	Moving plate	4
43	T151-155-000	PQXS-2206	Pipe bracket	4
44	T151-424-000	PQXS.DQ-24	Resistor	8
45	T151-496-000	PQXS-WG-34	Bearing	4
46	T151-492-000	PQXS-WG-30	Micro Switch	8

9.3 Ticket Detect Assembly

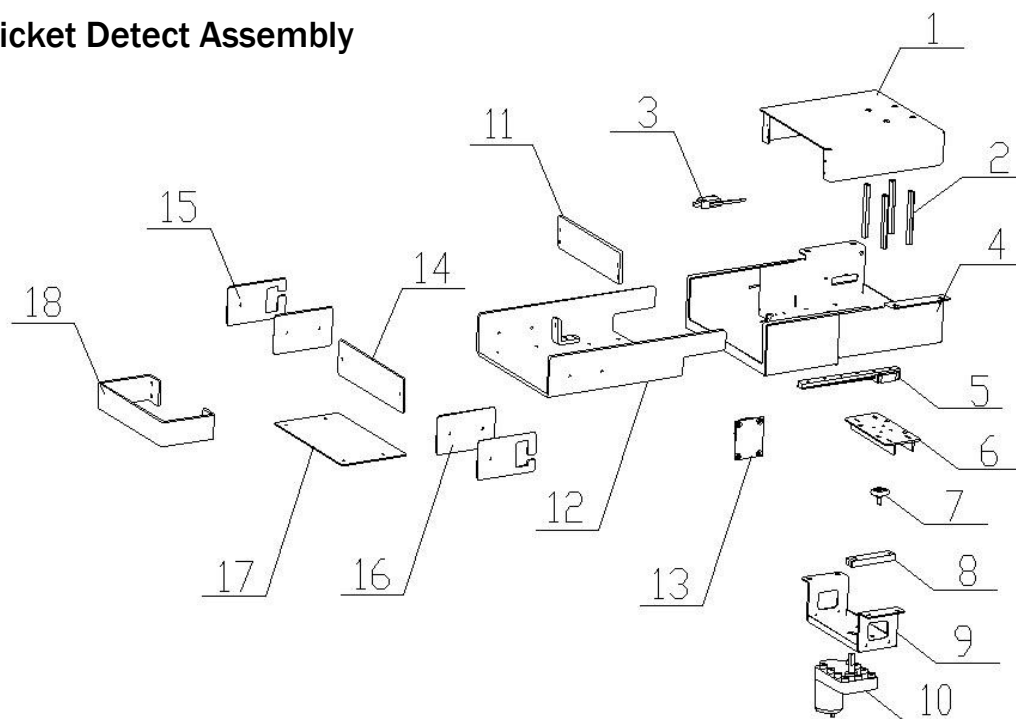


No.	Part No.	Drawing NO.	Name	Qty
1	T151-117-000	PQXS-1202	Pusher check plate	4
2	T151-208-000	PQXS-1205	Ticket check column	16
3	T151-492-000	PQXS-WG-30	Micro Switch	4
4	T151-116-000	PQXS-1201	Ticket check bracket	4
5	T151-475-000	PQXS-WG-13	Track	4
6	T151-118-000	PQXS-1204	Ticket check plate	4
7	T151-482-000	PQXS-WG-20	Bearing	4
8	T151-245-000	PQXS-1207	Ticket check crank	4
9	T151-119-000	PQXS-1206	Ticket check motor plate	4
10	T151-468-000	PQXS-WG-06	Ticket detect assembly motor	4
11	T151-279-000	PQXS-1208	Detect push plate	4
12	T151-254-000	PQXS-1203	Ticket check base plate	4
13	T151-604-000	PQXS.DQ-57	Motor control board(12V)	4
14	T151-601-000	PQXS-WG-38-1	Detect back plate	4
15	T151-280-000	PQXS-1209	Side detect pin plate	8
16	T151-602-000	PQXS-WG-39	Side detect plate	8
17	T151-607-000	22305000002	HDRDM4 reader (with antenna)	4set
18	T151-281-000	PQXS-1210	Detect plastic	4

9.4 BONUS Prize Assembly

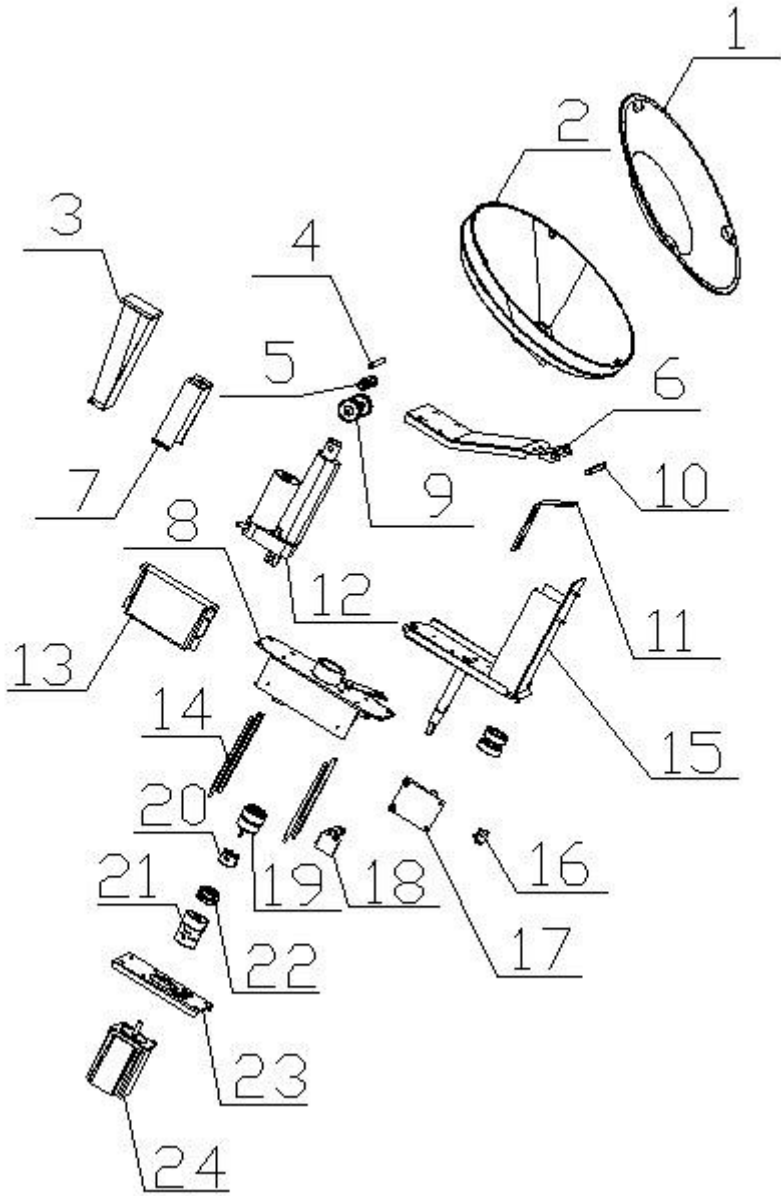


No.	Part No.	Drawing NO.	Name	Qty
1	T151-241-000	PQXS-2103	BONUS support plate	1
2	T151-268-000	PQXS-2104	BONUS base plate	1
3	T151-149-000	PQXS-2110	BONUS support column	1
4	T151-214-000	PQXS-2113	Axis	1
5	T151-215-000	PQXS-2114	Axis sleeve	2
6	T151-146-000	PQXS-2102	BONUS base	1
7	T151-148-000	PQXS-2108	Overturn table motor plate	1
8	T151-201-000	PQXS-2107	BONUS mounting plate	1
9	T151-493-000	PQXS-WG-31	Bearing	4
10	T151-217-000	PQXS-2118	Overturn table axis	1
11	T151-147-000	PQXS-2106	BONUS L type plate	1
12	T151-490-000	PQXS-WG-28	BONUS plate push rod motor	1
13	T151-427-000	PQXS.DQ-27	Synchronous motor controller	1
14	T151-212-000	PQXS-2109	Motor support column	4
15	T151-152-000	PQXS-2117	BONUS bracket	1
16	T151-463-000	PQXS-WG-01	Optical coupler	1
17	T151-404-000	PQXS.DQ-04	Motor control board	1
18	T151-471-000	PQXS-WG-09	Electric brush plate	1
19	T151-479-000	PQXS-WG-17	Collecting ring	1
20	T151-213-000	PQXS-2111	Wiring sleeve	1
21	T151-481-000	PQXS-WG-19	Coupler	1
22	T151-498-000	PQXS-WG-36	Nut	2
23	T151-151-000	PQXS-2116	BONUS motor plate	1
24	T151-466-000	PQXS-WG-04	BONUS prize assembly motor	1

9.5 Marquee Assembly

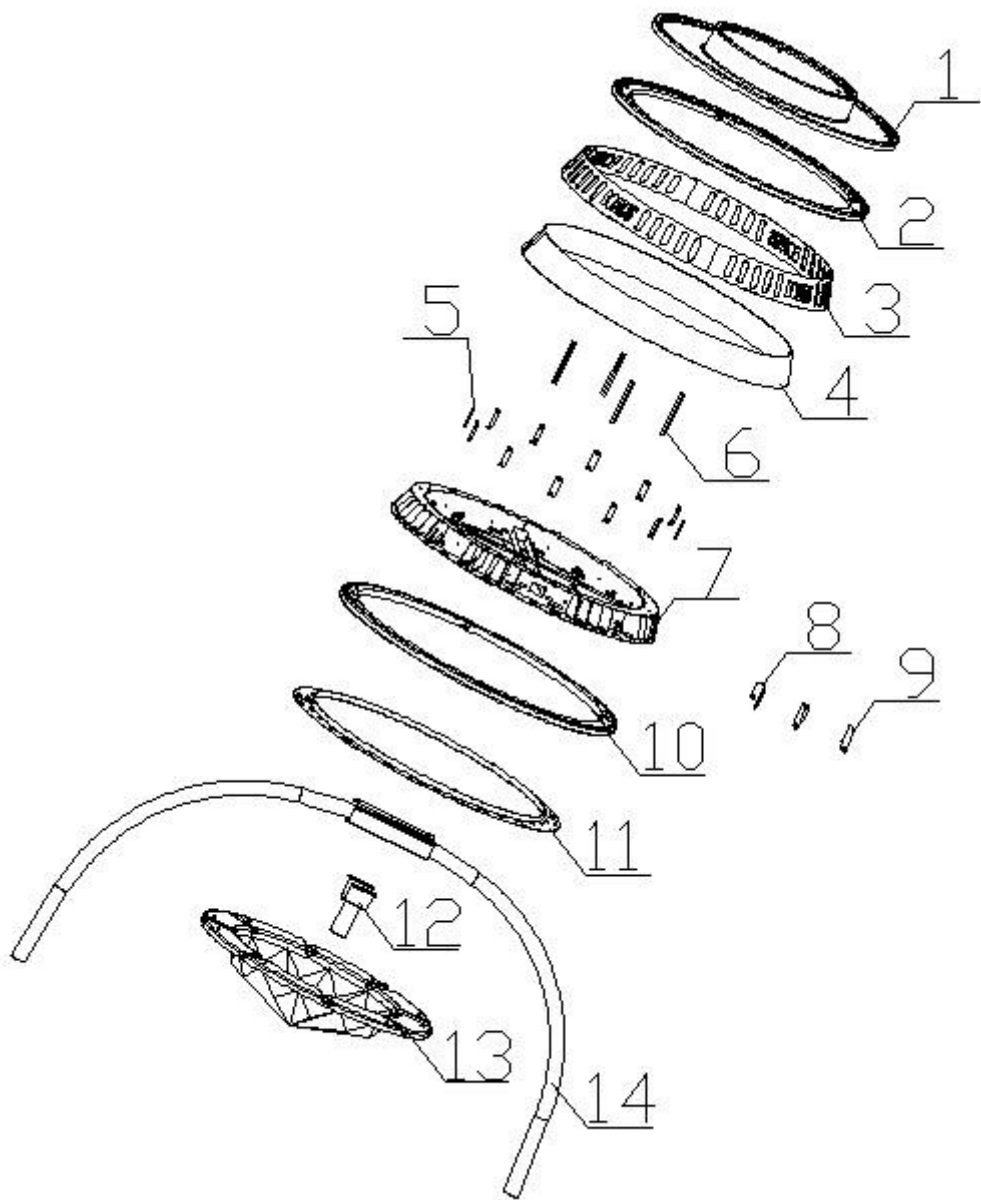


No.	Part No.	Drawing NO.	Name	Qty
1	T151-242-000	PQXS-3002	Marquee plastic	1
2	T151-258-000	PQXS-3006	Marquee top plastic	4
3	T151-259-000	PQXS-3010	BONUS plastic	2
4	T151-261-000	PQXS-3013	BONUS base plastic	2
5	T151-260-000	PQXS-3011	Marquee light strip pressing plate	12
6	T151-227-000	PQXS-3008	Marquee column	4
7	T151-180-000	PQXS-3003	Marquee bottom bracket	1
8	T151-183-000	PQXS-3014	Marquee plate A	16
9	T151-184-000	PQXS-3015	Marquee plate B	32
10	T151-257-000	PQXS-3004	Marquee bottom plastic	4
11	T151-181-000	PQXS-3005	Marquee bottom plate	2
12	T151-182-000	PQXS-3009	Marquee bracket	1
13	T151-243-000	PQXS-3007	Diamond plastic	1
14	T151-203-000	PQXS-3001	Marquee support plate	1

9.6 Cover Assembly

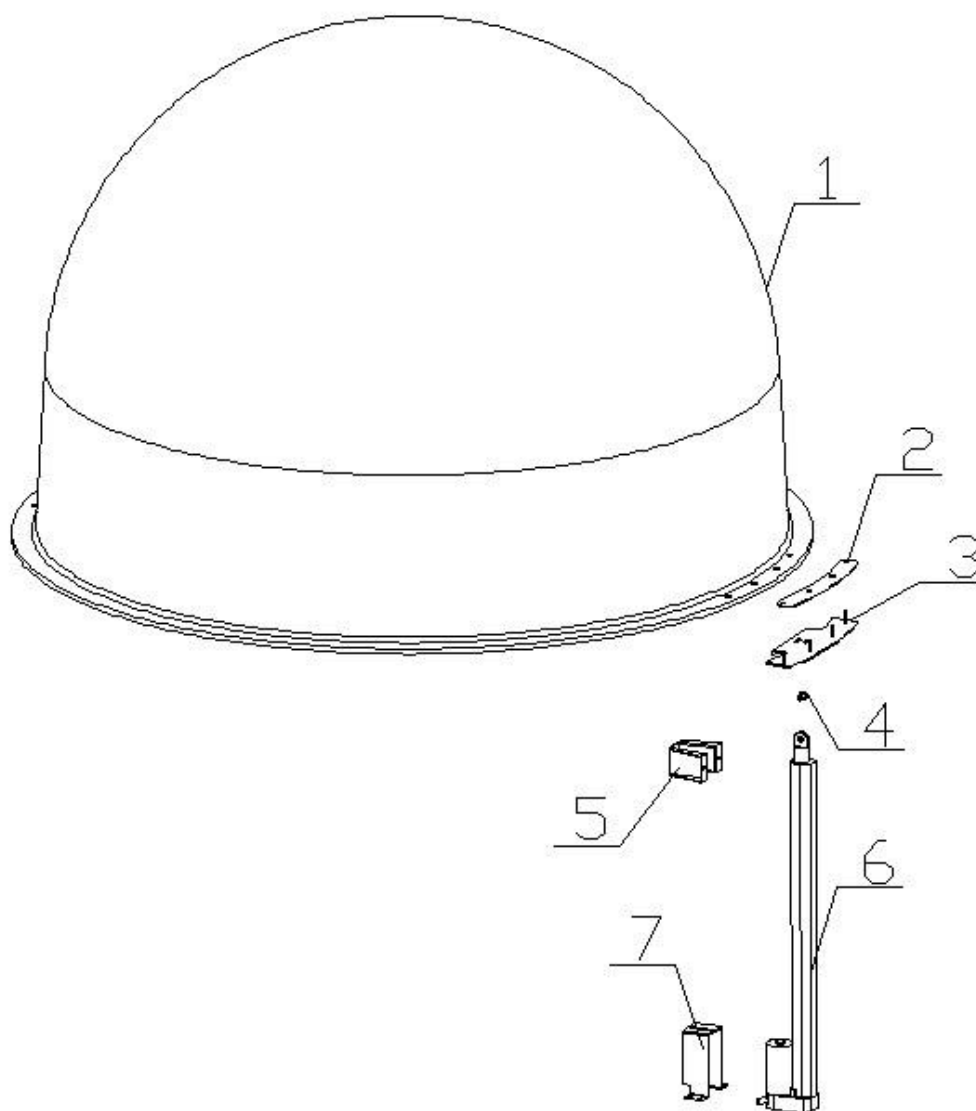


No.	Part No.	Drawing NO.	Name	Qty
1	T151-244-000	PQXS-4001	Cover	1
2	T151-186-000	PQXS-4003	Push rod pressing plate	2
3	T151-185-000	PQXS-4002	Push rod top plate	2
4	T151-228-000	PQXS-4004	Cotter pin	2
5	T151-109-000	PQXS-1010	Upper pressing plate	2
6	T151-491-000	PQXS-WG-29	Cover push rod motor	2
7	T151-115-000	PQXS-1025	Push rod plate	2

9.7 Control Panel Assembly

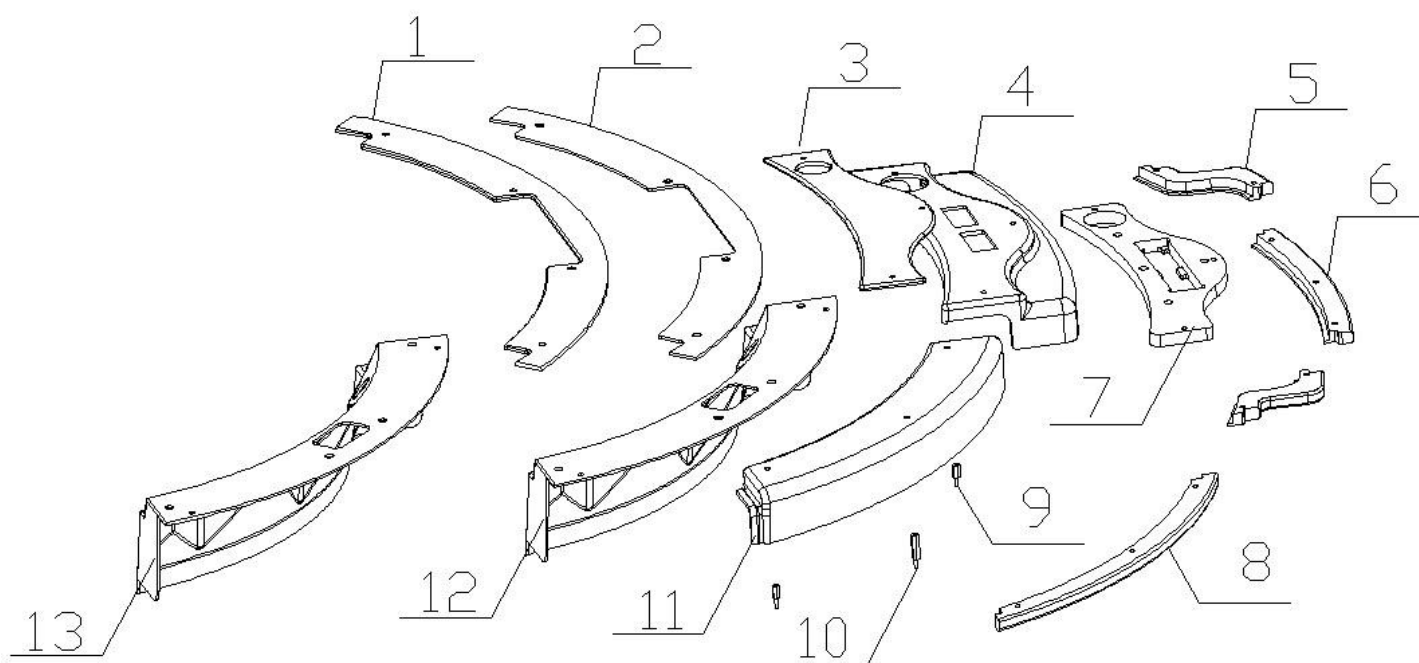


No.	Part No.	Drawing NO.	Name	Qty
1	T151-248-000	PQXS-1008	Inner circle light plastic C	4
2	T151-247-000	PQXS-1006	Inner circle light plastic A	4
3	T151-249-000	PQXS-1012	Button plate plastic	4
4	T151-235-000	PQXS-1013	Control panel plate	4
5	T151-252-000	PQXS-1100-2	Surrounding light plate B	8
6	T151-251-000	PQXS-1100-1	Surrounding light plate A	4
7	T151-501-000	PQXS-1014	Display mounting board	4
8	T151-253-000	PQXS-1100-3	Surrounding light plate C	4
9	T151-205-000	PQXS-1003	Control panel surrounding column A	8
10	T151-206-000	PQXS-1004	Control panel surrounding column B	4
11	T151-234-000	PQXS-1011	Control panel surrounding plate	4
12	T151-236-000	PQXS-1017	Surrounding plate B	2
13	T151-237-000	PQXS-1018	Surrounding plate A	2

9.8 Turntable Assembly

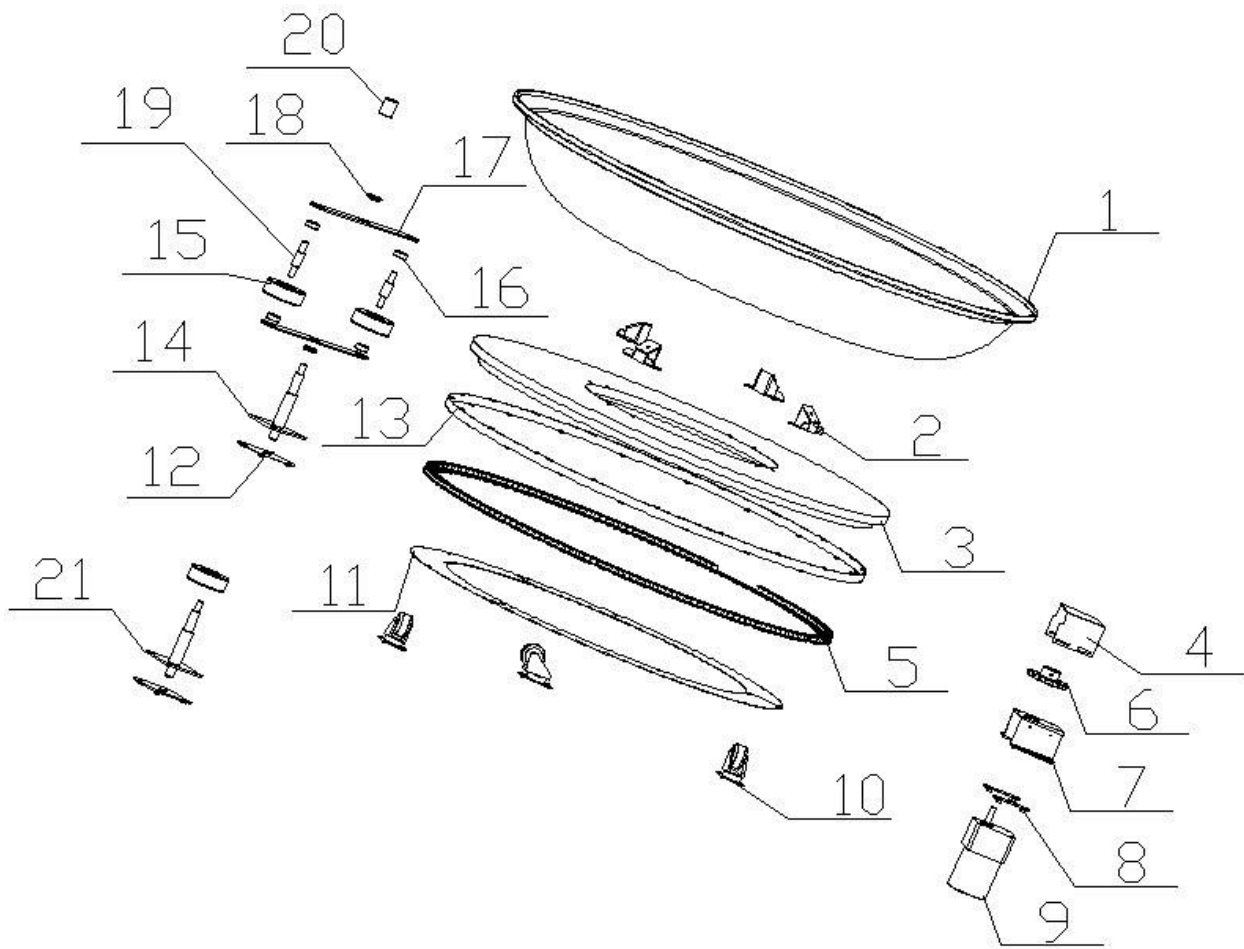


No.	Part No.	Drawing NO.	Name	Qty
1	T151-238-000	PQXS-1804	Prize plate	1
2	T151-129-000	PQXS-1801	Column	4
3	T151-503-000	PQXS-1805	Turntable board	1
4	T151-122-000	PQXS-1402	Turntable cover	1
5	T151-477-000	PQXS-WG-15	Chain	1
6	T151-229-000	PQXS-1403	Running wheel	1
7	T151-121-000	PQXS-1401	Turntable motor plate	1
8	T151-196-000	PQXS-1024	Turntable motor pressing plate	1
9	T151-465-000	PQXS-WG-03	Turntable assembly motor	1
10	T151-480-001	PQXS-WG-18	Caster	3
11	T151-131-000	PQXS-1803	Turntable rolling board	3
12	T151-110-000	PQXS-1016	Positioning wheel plate	3
13	T151-130-000	PQXS-1802	Turntable plate	1
14	T151-199-000	PQXS-1501	Fixing plate A	2
15	T151-486-000	PQXS-WG-24	Plastic wheel	5
16	T151-207-000	PQXS-1015	Sleeve A	5
17	T151-123-000	PQXS-1503	Locating wheel plate	4
18	T151-211-000	PQXS-1506	Copper sleeve	4
19	T151-209-000	PQXS-1504	Locating wheel axle	4
20	T151-210-000	PQXS-1505	Sleeve B	2
21	T151-198-000	PQXS-1016-2	Fixing plate B	1

9.9 Door Assembly

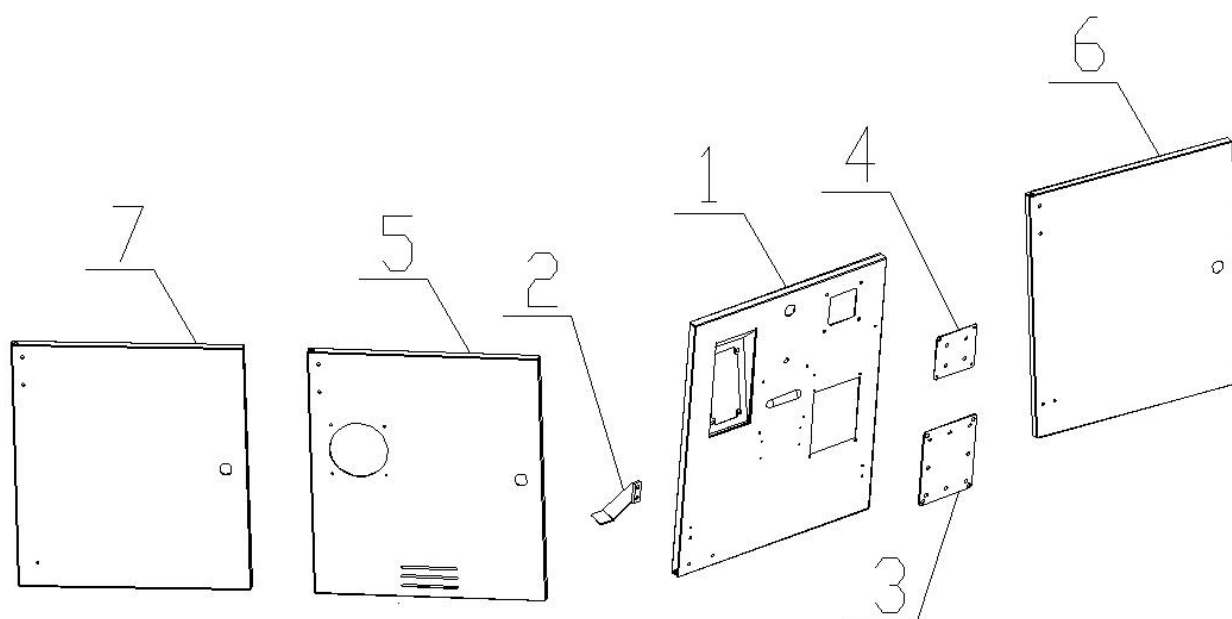


No.	Part No.	Drawing NO.	Name	Qty
1	T151-187-000	PQXS-5001	Coin mechanism door	4
2	T151-188-000	PQXS-5002	Coin mechanism door plate	4
3	T151-189-000	PQXS-5003	DBV blanking plate	4
4	T151-190-000	PQXS-5004	Card reader plate	4
5	T151-191-000	PQXS-6001	Speaker door	2
6	T151-192-000	PQXS-7001	Service door(between Yellow and Blue player)	1
7	T151-193-000	PQXS-8001	Service door(between Purple and Red player)	1


9.10 Electrical Components

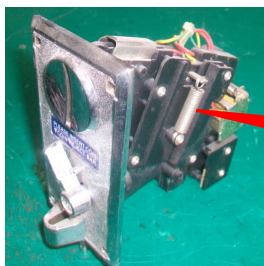


No.	Part No.	Drawing No.	Name	Qty
1	T151-410-000	PQXS.DQ-10	Coin mechanism	4

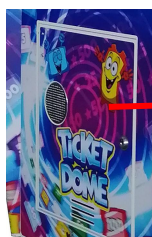


No.	Part No.	Drawing No.	Name	Qty
1	T151-439-000	PQXS.DQ-39	Speaker	2

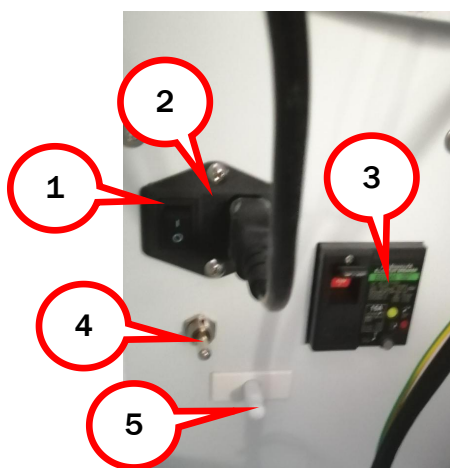



No.	Part No.	Drawing No.	Name	Qty
1	T151-444-000	PQXS.DQ-44	Filter	1
2	T151-445-000	PQXS.DQ-45	Fuse	1
3	T151-443-000	PQXS.DQ-43	Residual current circuit breaker	1
4	T151-428-000	PQXS.DQ-28	Toggle switch	1
5	T151-442-000	PQXS.DQ-42	Shut-off switch	1

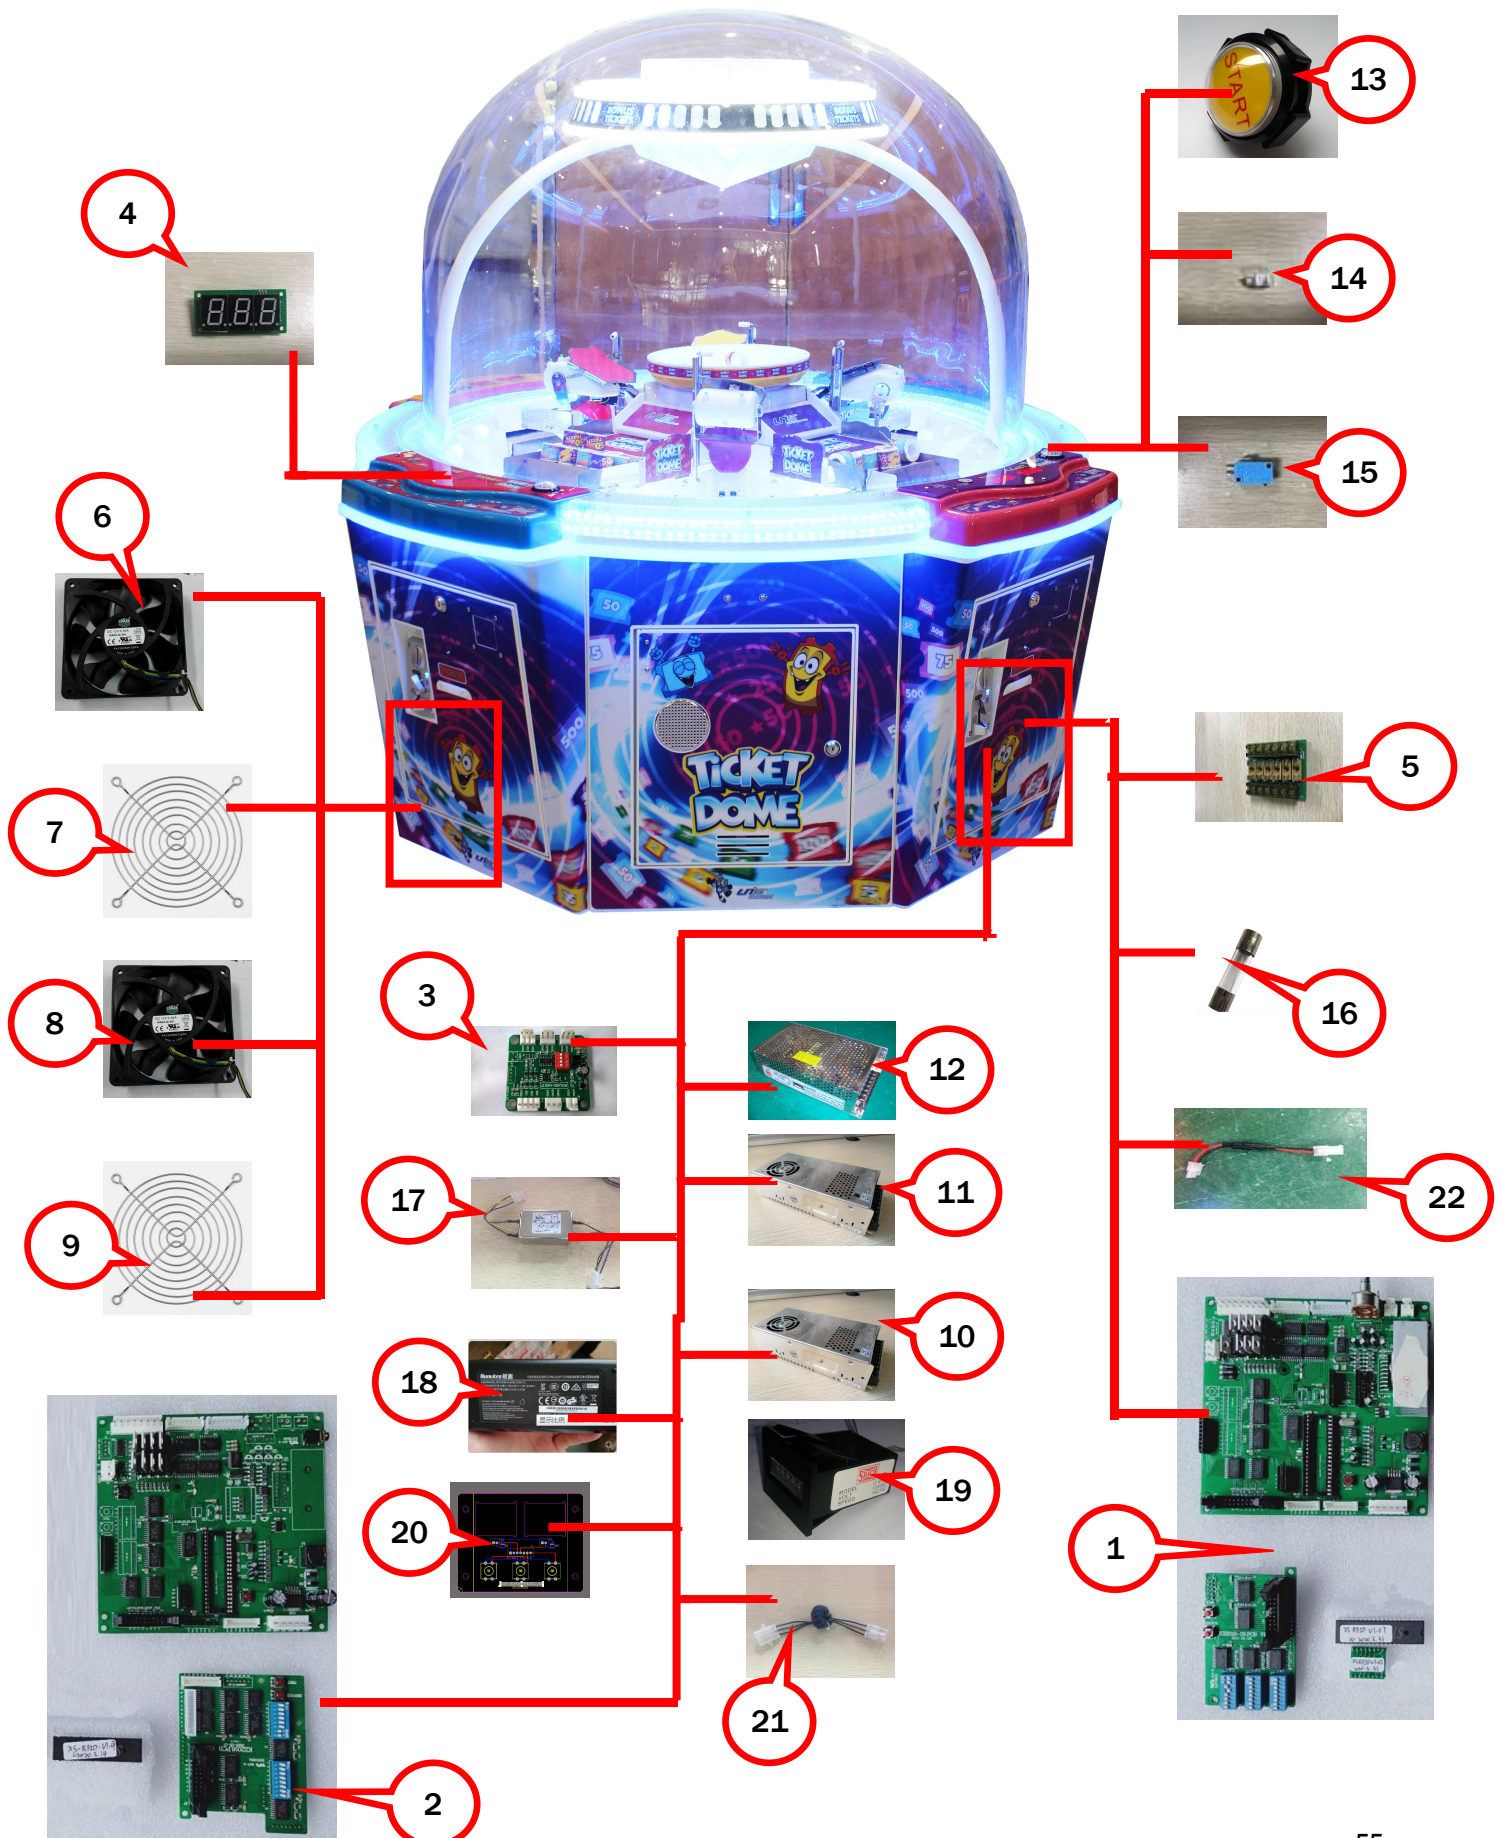

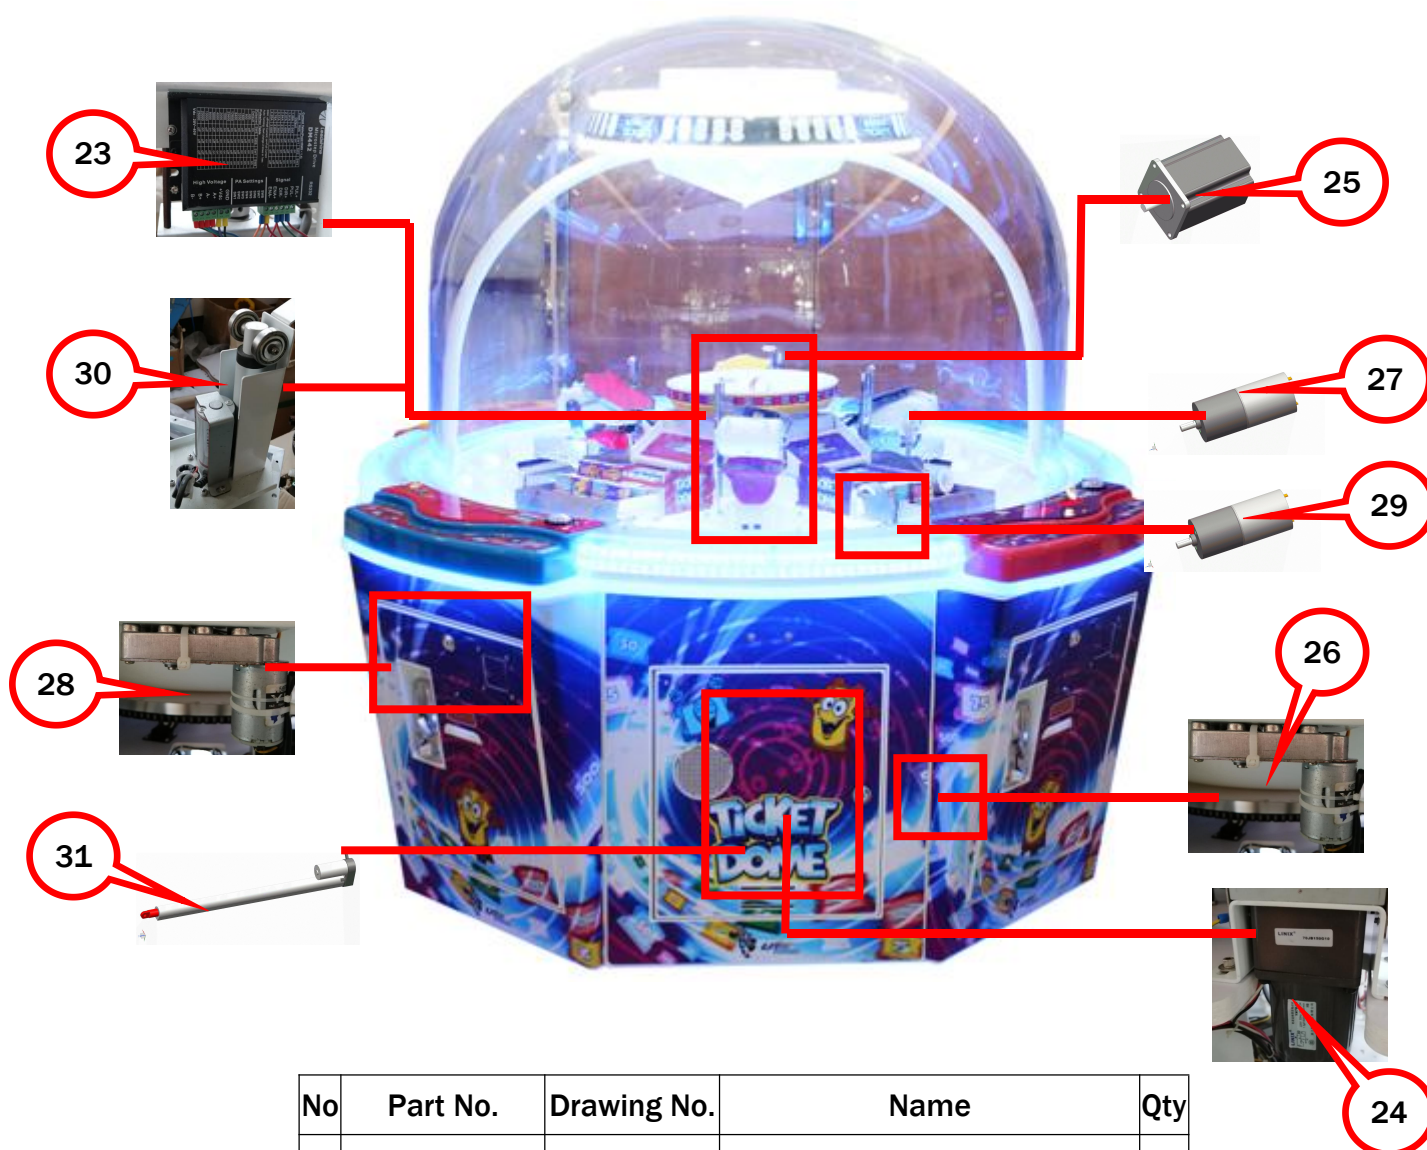


No	Part No.	Drawing No.	Name	Qty
1	T151-609-000	/	Ticket dome main board set	1
	T151-401-000	PQXS.DQ-01	Main board	1
	T151-403-000	PQXS.DQ-03	PCB board	1
	T151-454-000	PQXS.DQ-54	Music chip	1
	T151-453-000	PQXS.DQ-53	Single chip microcomputer	1
2	T151-610-000	/	Ticket dome sub board set	1
	T151-608-000	PQXS.DQ-59	Sub board	1
	T151-402-000	PQXS.DQ-02	Extension board	1
	T151-453-000	PQXS.DQ-53	Single chip microcomputer	1
3	T151-405-000	PQXS.DQ-05	Light control board	1
4	T151-408-000	PQXS.DQ-08	Display	4
5	T151-409-000	PQXS.DQ-09	Fuse board	1
6	T151-429-000	PQXS.DQ-29	Fan(40*40)	1

No	Part No.	Drawing No.	Name	Qty
7	T151-430-000	PQXS.DQ-30	Fan net(40*40)	2
8	T151-431-000	PQXS.DQ-31	Fan(120*120)	2
9	T151-432-000	PQXS.DQ-32	Fan net(120*120)	4
10	T151-433-000	PQXS.DQ-33	Power supply(24V)	1
11	T151-434-000	PQXS.DQ-34	Power supply(12V)	1
12	T151-435-000	PQXS.DQ-35	Power supply(5V)	1
13	T151-436-000	PQXS.DQ-36	Button	4
14	T151-437-000	PQXS.DQ-37	LED light	4
15	T151-438-000	PQXS.DQ-38	Button switch	4
16	T151-446-000	PQXS.DQ-46	Fuse	16
17	T151-440-000	PQXS.DQ-40	Filter	1
18	T151-455-000	PQXS.DQ-55	Adapter	1
19	T151-448-000	PQXS.DQ-48	Counter	8
20	T151-605-000	PQXS.DQ-58	Counter board	4
21	T151-441-000	PQXS.DQ-41	Mn-Zinc green ring	1
22	T151-447-000	PQXS.DQ-47	Fuse holder	8
23	T151-464-000	PQXS.DQ-27	Stepping motor Driver	1
24	T151-465-000	PQXS-WG-03	Turntable assembly motor	1
25	T151-466-000	PQXS-WG-04	BONUS prize assembly motor	1
26	T151-467-000	PQXS-WG-05	Scoop assembly motor	4
27	T151-468-000	PQXS-WG-06	Scoop motor	4
28	T151-469-000	PQXS-WG-07	Ticket detect assembly motor	4
29	T151-470-000	PQXS-WG-08	Pusher motor	4
30	T151-490-000	PQXS-WG-28	BONUS plate push rod motor	1
31	T151-491-000	PQXS-WG-29	Cover push rod motor	2

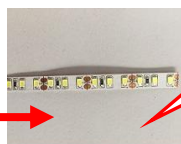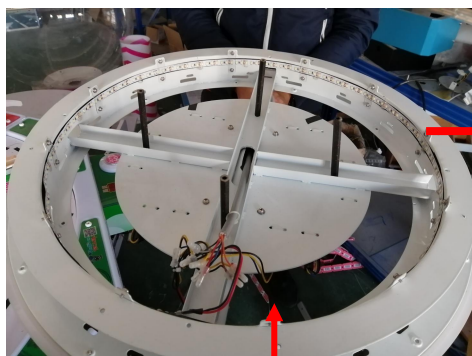

11

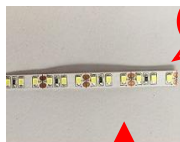

12






1




13




7

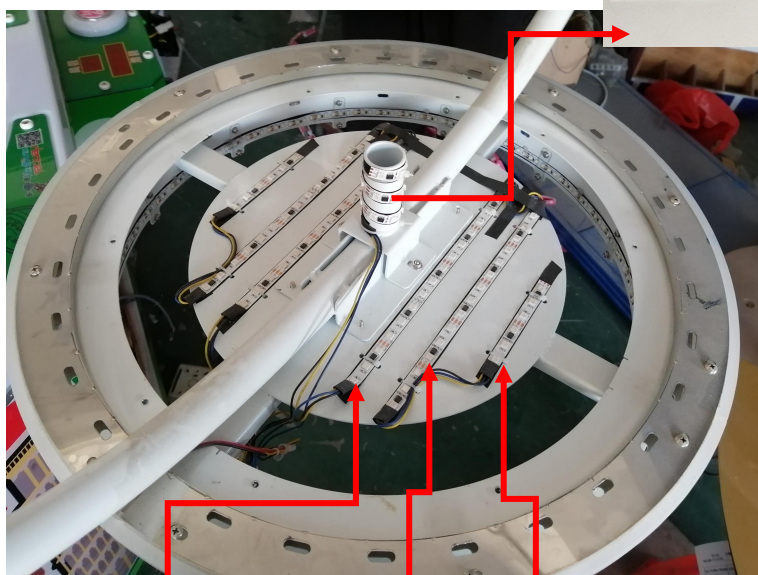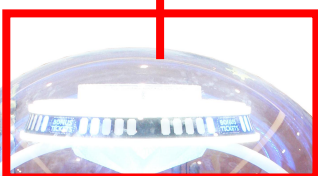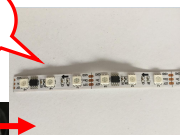


10

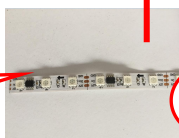


9


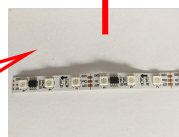


8

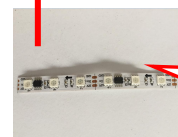


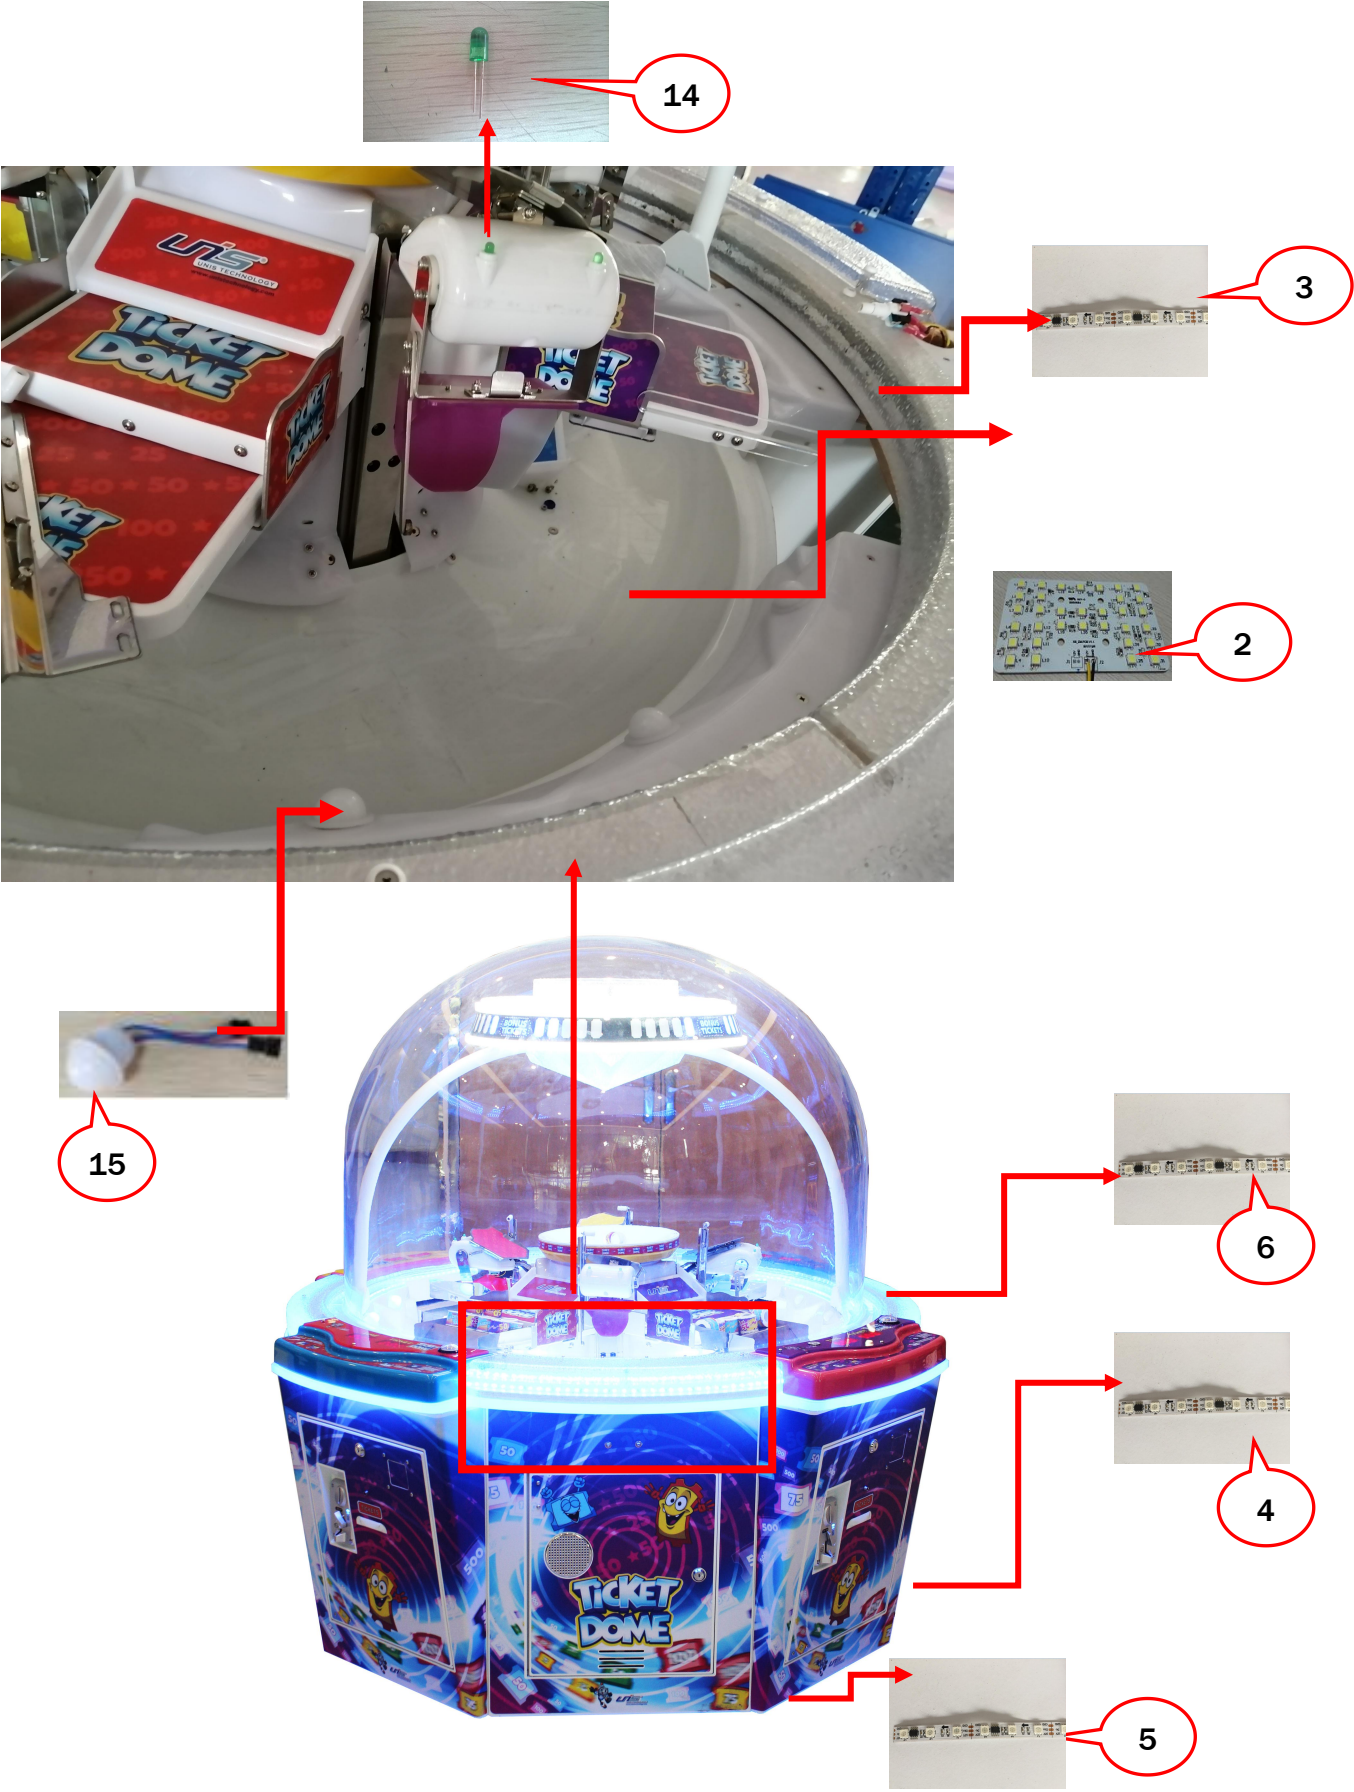

No.	Part No.	Drawing No.	Name	Spec	Qty
1	T151-407-000	PQXS.DQ-07	Light board	XS_BONUS_CEC. PCB V2.0	4
2	T151-406-000	PQXS.DQ-06	LED PCB board	XS_ZM.PCB V1.1	4
3	T151-411-000	PQXS.DQ-11	Inside breath light	181.1 in(4.6m)	1
4	T151-412-000	PQXS.DQ-12	Outside breath light	196.8 in(5m)	1
5	T151-413-000	PQXS.DQ-13	Bottom breath light	165.3 in(4.2m)	1
6	T151-414-000	PQXS.DQ-14	Outside line breath light	23.6 in(0.6m)	8
7	T151-415-000	PQXS.DQ-15	Marquee breath light	21.65 in(0.55m)	1
8	T151-416-000	PQXS.DQ-16	Marquee light 1	9.8 in(0.25m)	2
9	T151-417-000	PQXS.DQ-17	Marquee light 2	7.8 in(0.2m)	2
10	T151-418-000	PQXS.DQ-18	Marquee light 3	3.9 in(0.1m)	2
11	T151-419-000	PQXS.DQ-19	Marquee inside light	59.0 in(1.5m)	1
12	T151-420-000	PQXS.DQ-20	Marquee upper white light	63.9 in(1.625m)	1
13	T151-421-000	PQXS.DQ-21	Marquee bottom white light	67.9 in(1.725m)	1
14	T151-422-000	PQXS.DQ-22	Scoop light	ADS-219CW	12
15	T151-423-000	PQXS.DQ-23	Light bulb	Green	8
16	T151-459-000	23100000005	Ticket dispenser	CL-022Q-270	4
	T151-460-000	29790700002	Ticket converted board	TICK-CH.PCB	4

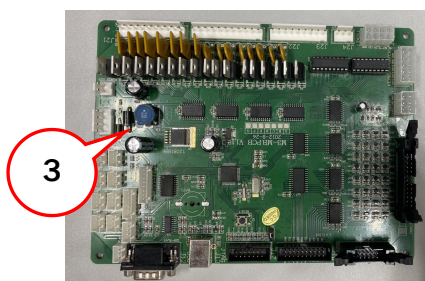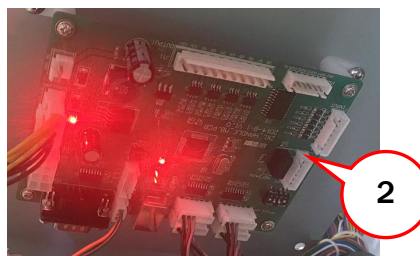

No.	Part No.	Drawing No.	Name	Qty
1	T151-607-000	22305000002	HDRDM4 reader(with antenna)	1 set
2	T151-606-000	29741502001A	PCB board	1
3	T151-461-000	29791300001	M3 main board	1

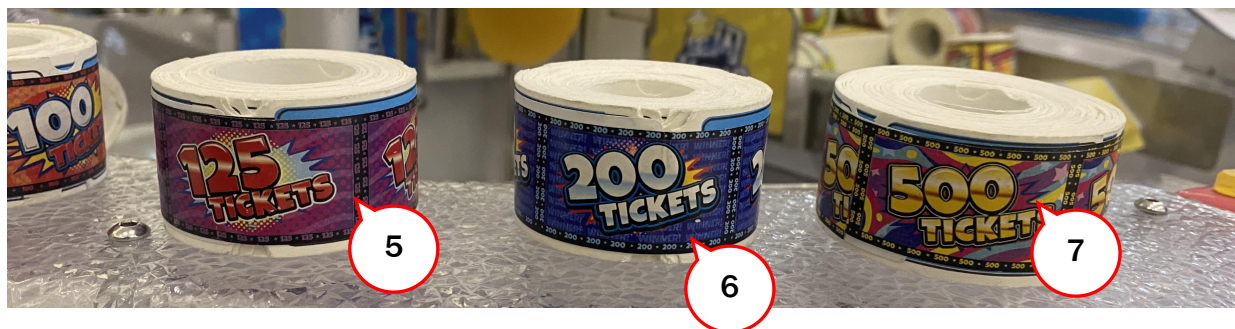

No.	Part No.	Drawing No.	Name	Qty
1	T151-510-000	20621901001	25 point ticket roll	380
2	T151-511-000	20621901002	50 point ticket roll	110
3	T151-512-000	20621901003	75 point ticket roll	50
4	T151-513-000	20621901004	100 point ticket roll	15
5	T151-514-000	20621901005	125 point ticket roll	15
6	T151-515-000	20621901006	200 point ticket roll	15
7	T151-516-000	20621901007	500 point ticket roll	15
8	T151-518-000	20621901008	5 point ticket roll	50
9	T151-519-000	20621901009	10 point ticket roll	50


9.11 Decals







No.	Part No.	Drawing No.	Name	Qty
1	T151-707-000	PQXS.HM-01	Speaker door decal	2
2	T151-708-000	PQXS.HM-02	Service door decal	2
3	T151-709-000	PQXS.HM-03	Coin mechanism door decal	4
4	T156-710-000	PQXS.HM-56	Red player decal	1
	T156-711-000	PQXS.HM-57	Yellow player decal	1
	T156-712-000	PQXS.HM-58	Blue player decal	1
	T156-713-000	PQXS.HM-59	Purple player decal	1
5	T151-738-000	PQXS.HM-32	Blue decal	1
	T151-739-000	PQXS.HM-33	Purple decal	1
	T151-740-000	PQXS.HM-34	Red decal	1
	T151-741-000	PQXS.HM-35	Yellow decal	1
6	T151-718-000	PQXS.HM-12	Pusher blue decal	1
	T151-719-000	PQXS.HM-13	Pusher purple decal	1
	T151-720-000	PQXS.HM-14	Pusher red decal	1
	T151-721-000	PQXS.HM-15	Pusher yellow decal	1
7	T151-726-000	PQXS.HM-20	Play instruction blue decal	1
	T151-727-000	PQXS.HM-21	Play instruction purple decal	1
	T151-728-000	PQXS.HM-22	Play instruction red decal	1
	T151-729-000	PQXS.HM-23	Play instruction yellow decal	1
8	T151-714-000	PQXS.HM-08	Fix pusher blue decal	1
	T151-715-000	PQXS.HM-09	Fix pusher purple decal	1
	T151-716-000	PQXS.HM-10	Fix pusher red decal	1
	T151-717-000	PQXS.HM-11	Fix pusher yellow decal	1

No.	Part No.	Drawing No.	Name	Qty
9	T151-730-000	PQXS.HM-24	Pusher side blue decal	1
	T151-731-000	PQXS.HM-25	Pusher side purple decal	1
	T151-732-000	PQXS.HM-26	Pusher side red decal	1
	T151-733-000	PQXS.HM-27	Pusher side yellow decal	1
10	T151-734-000	PQXS.HM-28	Blue LOGO decal	1
	T151-735-000	PQXS.HM-29	Purple LOGO decal	1
	T151-736-000	PQXS.HM-30	Red LOGO decal	1
	T151-737-000	PQXS.HM-31	Yellow LOGO decal	1
11	T151-742-000	PQXS.HM-36	BONUS decal	1
12	T151-743-000	PQXS.HM-37	Button decal	1
13	T151-758-000	PQXS.HM-52	Front side blue decal	1
	T151-759-000	PQXS.HM-53	Front side purple decal	1
	T151-760-000	PQXS.HM-54	Front side red decal	1
	T151-761-000	PQXS.HM-55	Front side yellow decal	1

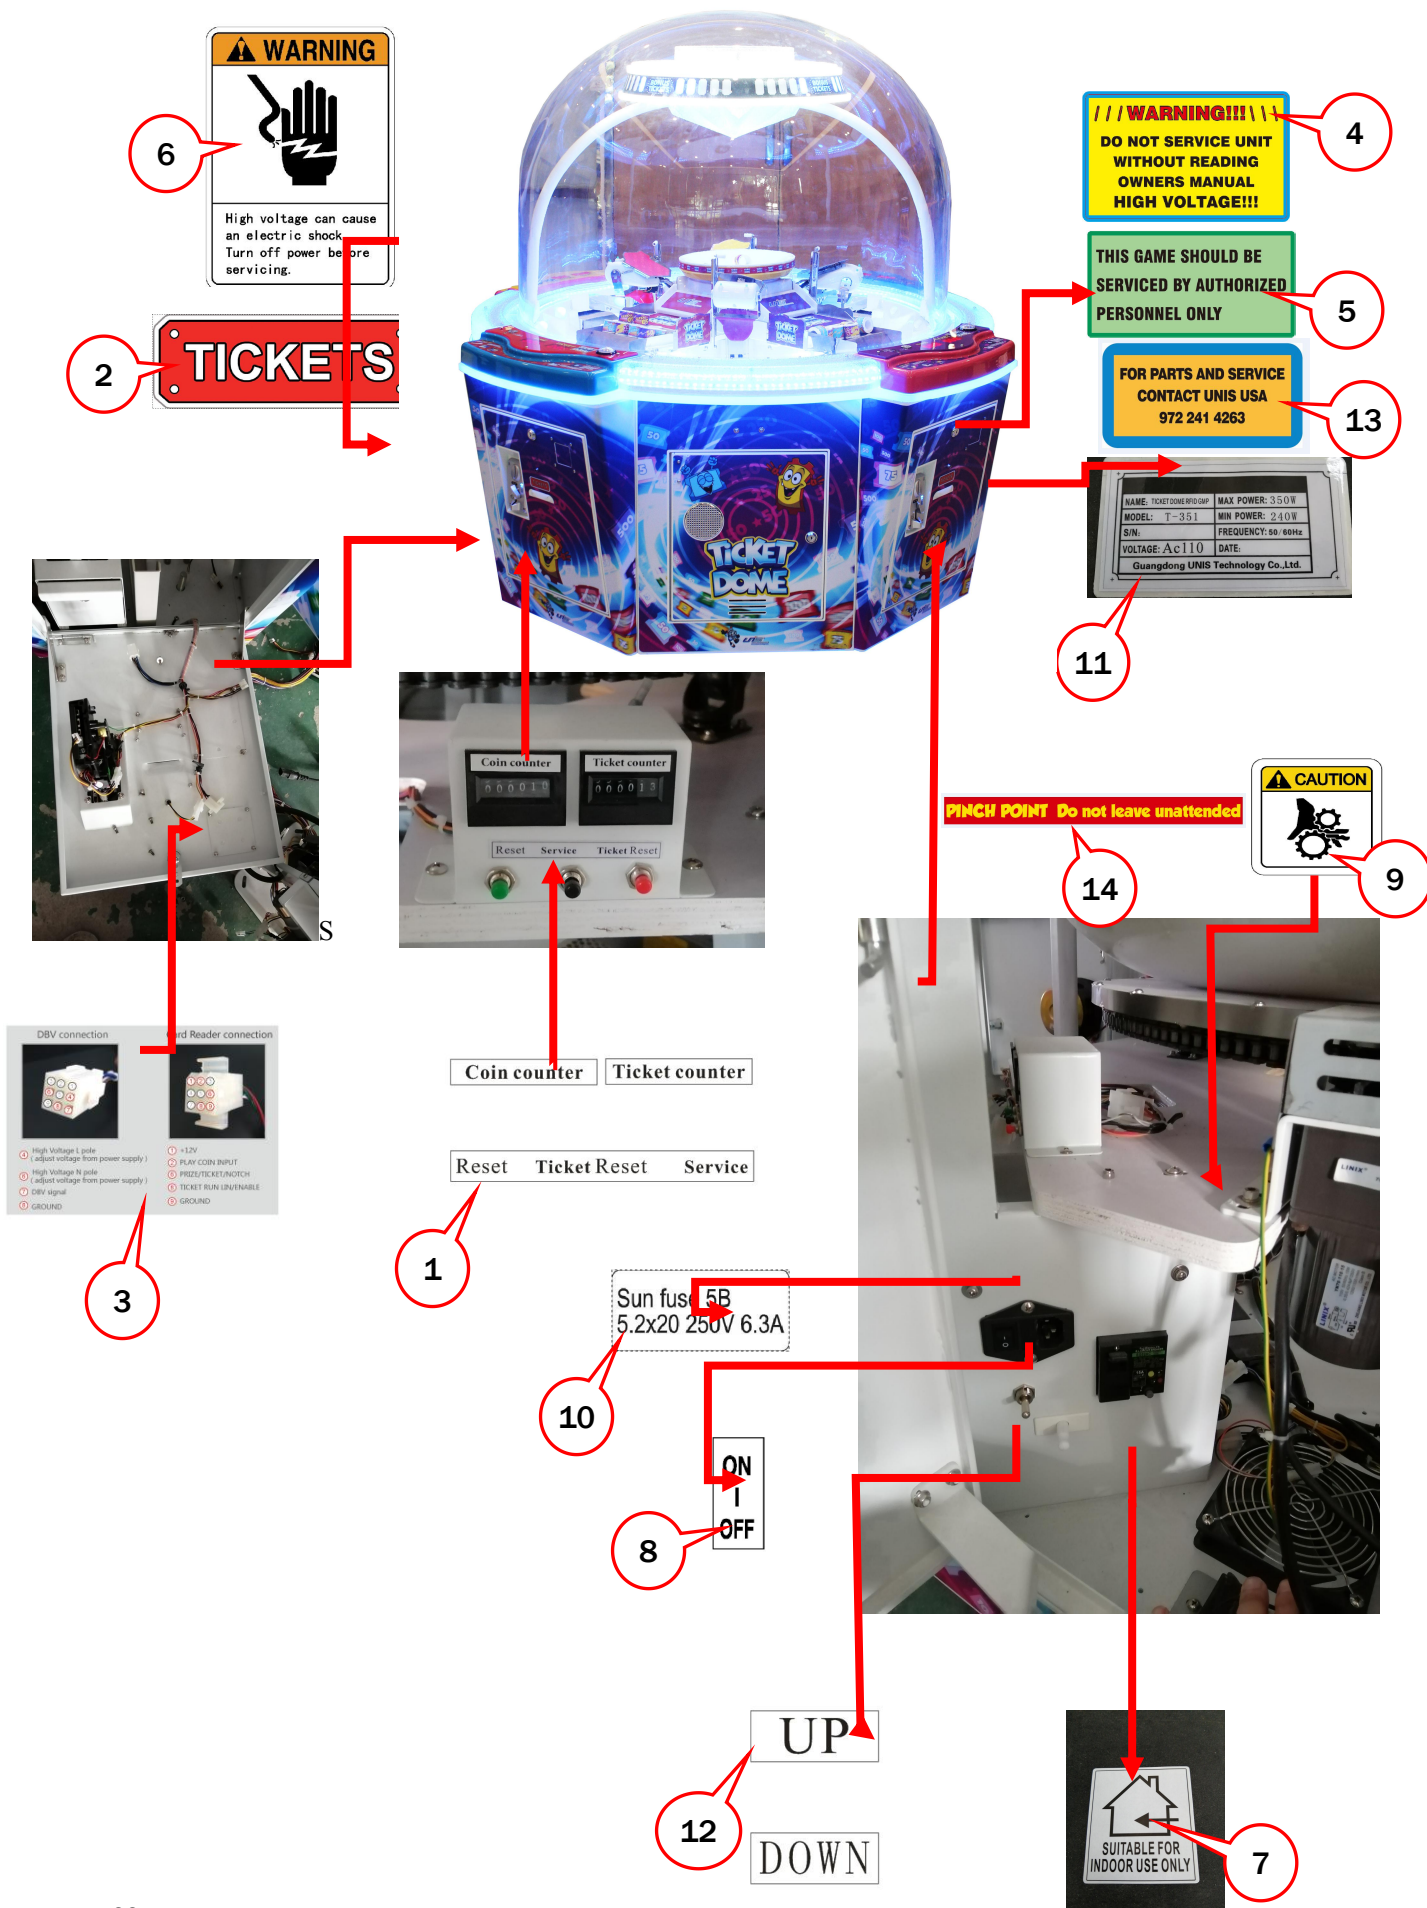

No.	Part No.	Drawing No.	Name	Qty
1	T151-744-000	PQXS.HM-38	Counter decal	4
2	T151-745-000	PQXS.HM-39	Ticket decal	4
3	T151-746-000	PQXS.HM-40	DBV port decal	4
4	T151-747-000	PQXS.HM-41	Service door label(green)	2
5	T151-748-000	PQXS.HM-42	High voltage warning decal	1
6	T151-749-000	PQXS.HM-43	High voltage label	2
7	T151-750-000	PQXS.HM-44	Inside label	1
8	T151-751-000	PQXS.HM-45	Switch decal	1
9	T151-752-000	PQXS.HM-46	Caution label	5
10	T151-753-000	PQXS.HM-47	Fuse label	1
11	T151-754-000	PQXS.HM-48	Nameplate label	1
12	T151-755-000	PQXS.HM-49	Up-down decal	1
13	T151-756-000	PQXS.HM-50	Service label	1
14	T151-757-000	PQXS.HM-51	Warning label	7

 

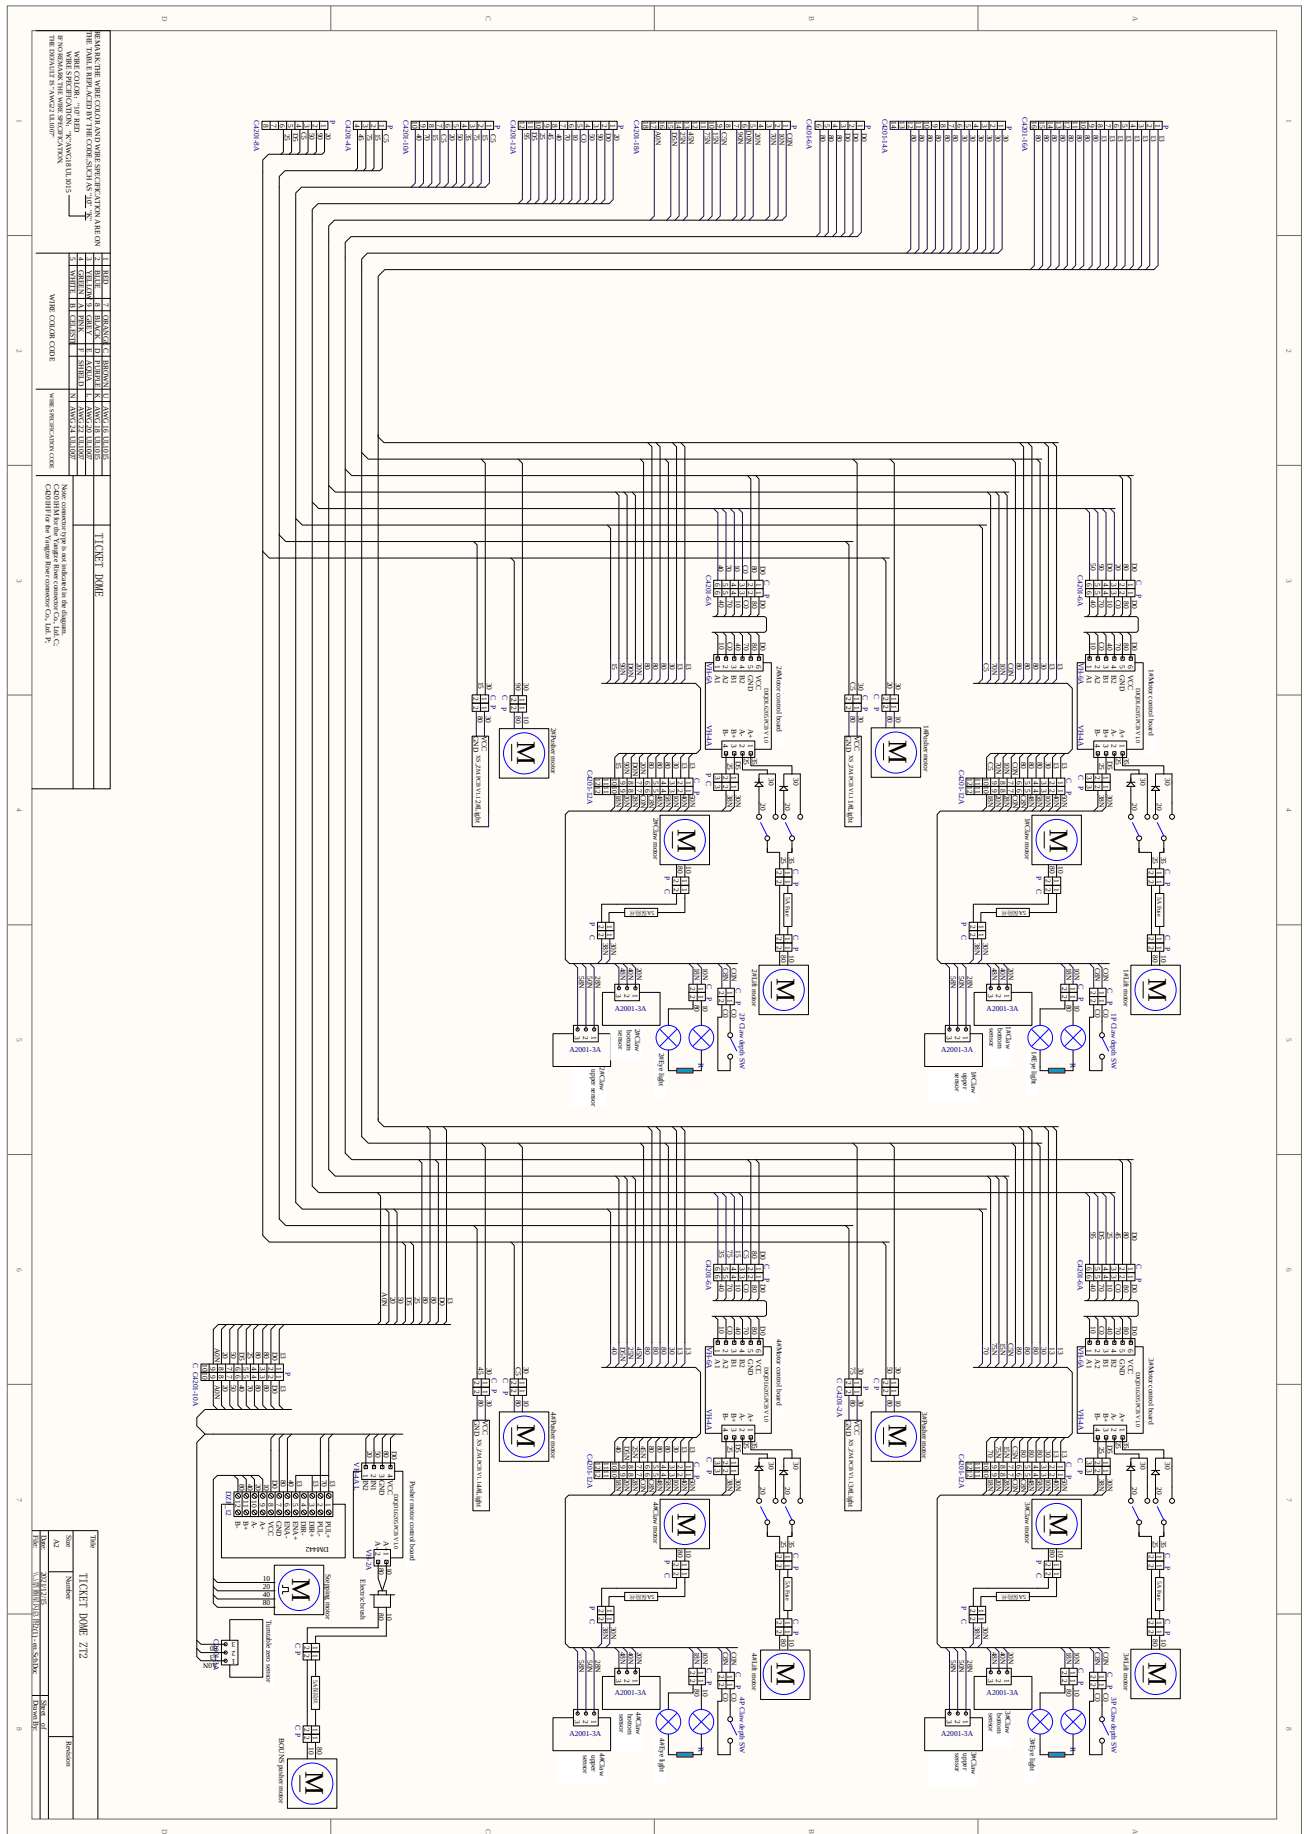

Ticket Dome Wiring Instruction

[illegible]

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.