

《QUICK TOSS》

User' s Manual



Warning: please read this manual carefully before using and installing this product.

Introduction

In order to use this game safely, be sure to read this Operator's Manual thoroughly before installation, adjustment or use of this game.

- The power must be turned off during maintenance and repair of the machine

To avoid short circuits, turn off the power supply before touching the internal components of the machine. If the operation needs to be powered on, the operation manual should be followed

- Make sure to choose the right accessories when replacing devices.

Improper use of accessories can lead to fire or electrical short circuit, damage to the motherboard and components

- Do not disassemble, assemble or alter the equipment randomly

This can lead to fire or electrical short circuit, mechanical failure, etc

- Make sure to meet the manufacturer's requirements in moving, turning, transportation, etc.

Arbitrary manual movement, turnover, transportation, etc., will damage the equipment and destroy mechanical properties.

- This machine is suitable for indoor use, not outdoor use.

Outdoor use will affect the performance of the machine.

- Do not use the machine in the following places:

- ★ A leaking or highly wet place

- ★ Near a hot object

★Near dangerous objects

★A smooth or unstable place

★Get close to spark-generating equipment.

★Shaking place

- Do not place vases, cups, containers, etc. with water on the machine. Also do not place chemicals or heavy objects on the machine

Spilled liquids may cause electrical short-circuits and damage devices, chemicals may corrode machines, and falling objects may harm people and damage machines.

- Do not place objects in the air outlet of the machine.

If the exhaust port is blocked, the temperature of the machine will rise, which will affect the normal operation of the machine and damage the device.

- The power cord should not be held down by heavy objects.

This may damage electrical wiring, cause short circuits and fires.

- When pulling the power cord from the socket, pull it out by holding the plug, not the wire.

This may damage electrical wiring, cause short circuits and fires.

- Do not pull the plug directly with wet hands.

Otherwise it will cause electric shock to the human body.

- Do not stretch, twist or fold the power cord. Do not expose the power cord to the hot object.

All of the above will damage the wire, cause short circuit and fire.

- The power cord cannot be easily kicked or touched.

This can harm people and damage machines.

- Use the correct voltage and fuse (see technical parameters).

The use of other standard voltages may cause short circuit and fire, and the use of unqualified fuses may damage the machine and cause fire.

- Non-professionals are not allowed to repair the machine

This may cause problems such as fires or out-of-control operations.

CONTENTS

Preface	1-3
Catalogue	4
1.Specifications	5
2.Package Contents	6
3.Notes on the machine	7-8
4.Connecting power core and grounding	9-11
5.Playing Instruction	11
6.Major Components and installation instruction	12-15
8.Maintenance and Troubleshooting.....	16-17

A. Specification

1. Rated power supply: AC110V 60Hz or AC220V 50Hz

(Note: As the actual voltage, please refer the label of the machine)

2. Dimensions: W1020×D2405×H2680mm

3. Weight: about 220Kg

4. Power Consumption: : Mini power consumption: 450W

Max power consumption: 500W

5. Environmental Condition: Temperature: -10°C ~ +40°C (indoor)

Humidity: ≤90%

Atmospheric pressure: 86Kpa ~ 106Kpa

6. Packing size:

Console W107*D85*H130 cm; Machine: W116*D85*H202 cm



Note: Game parameters are subject change without notice

 
 



B. Package Content

- Make sure that all the parts shown below are include in product package

- If any parts are missing, contact your distributor

(1) One PC.

(2) One set of repair parts,as follow:

Item	Content	Type	Illustration	Qty	Unit	Note
1	Instruction	English		1	English	
2	Key	168		1	Piece	For cash box
4	Power cable	1.8m/10A		1	Piece	
5	Fuse	10A (220V)		2	Pieces	
8	Balls	Red		30	Pieces	



Note: Game parameters are subject change without notice

C. Notes on the Machine

Place:



Warning:

This product is an indoor game machine. Do not install it outside

Notice:

1. The machine should not be placed in the inclined position, which is easy to cause accidents

2. Avoid installing in places mentioned below so as not to cause a fire, electric shock, injury or malfunction :

 
- Place subject to rain or leakage, or place subject to high humidity in the proximity of an indoor swimming pool or shower, etc. ;
- Place subject to direct sunlight, or place subject to high temperatures in the proximity of heating unit, etc. ;
- Place filled with inflammable gas or vicinity of highly inflammable/volatile chemicals or hazardous matter ;
- Dusty places ;

- Sloped surfaces;
- Place subject to any type of violent impact;
- Vicinity of anti-disaster facilities such as fire exits and fire extinguishers;

Game leveling:

Install this machine on a flat surface, adjust levelers to lift casters off the ground and level game.

Make sure that the machine is level with the floor, if the machine is not level medals may not be play well

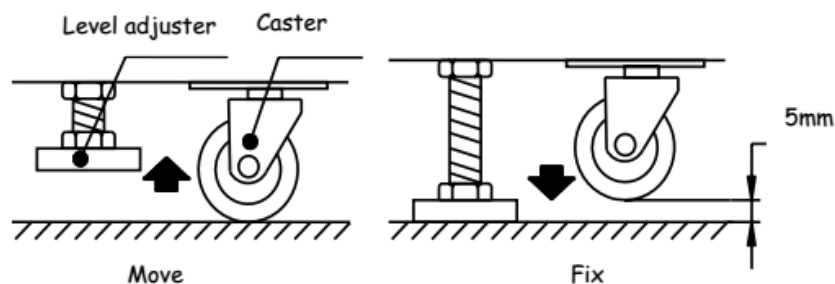


Before move, please follow the below step:

1. Turn off the power switch
2. Unplug the power core
3. Please drain off water and keep the whole game dry
4. Adjust the levels in high before moving it

D. Connecting the power and cord and grounding

Method:

 Insert the power core plug into a inlet box, and then insert the plug of power core into the power socket of the machine

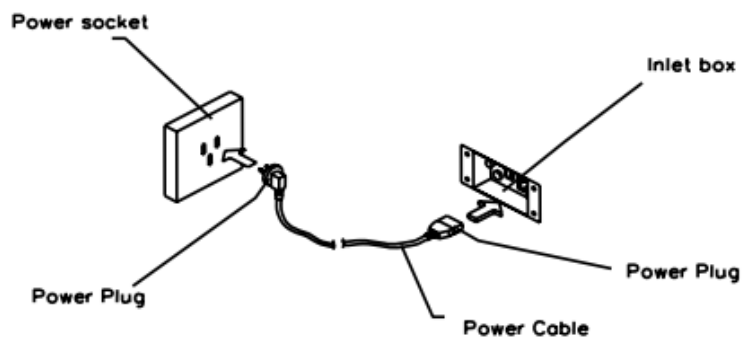


This machine' s supply voltage is: 110V/60Hz or 220V/50Hz

For actual supply voltage, please refer the label of the machine.

Fuse specifications:

110V/60Hz:125V/10A ϕ 5-20mm

 220V/50Hz:250V/5A ϕ 5-20mm

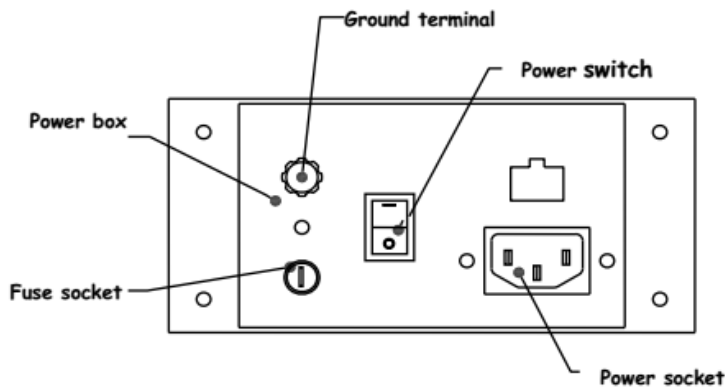

**Usage
requirement:**

 
1. Be sure to check the Electrical Specification , ensure that this product is compatible with the Location' s power supply,voltage and frequency requirement.A plate describing Electrical Specification is attached to the products.Non-compliance with the Electrical Specifications may cause a fire and electric shock

2. Too many wires connected to the same power socket may cause the fire resulting from overheat




Warning:

➤ Do not put heavy items on power cord

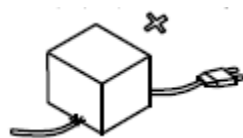

 ➤ When the power cord is removed from the socket, you should grab the plug and pull it out

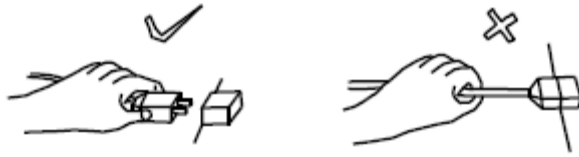

- Do not touch the power plug with a wet hand



- Do not draw or twist the cord
- Do not place the cord where the player can easily touch or kick



- Run this machine with the correct power configuration

E. Playing Instruction:

1. Start coin insertion
2. Select game content
3. Hit the target and receive the corresponding score
4. The more points you receive at a certain time, the more lottery tickets you will receive.

F. Main components of the machine and installation instructions

1、 How to SET:



 
Down 下

SET

Up

2、 Access to settings

Up

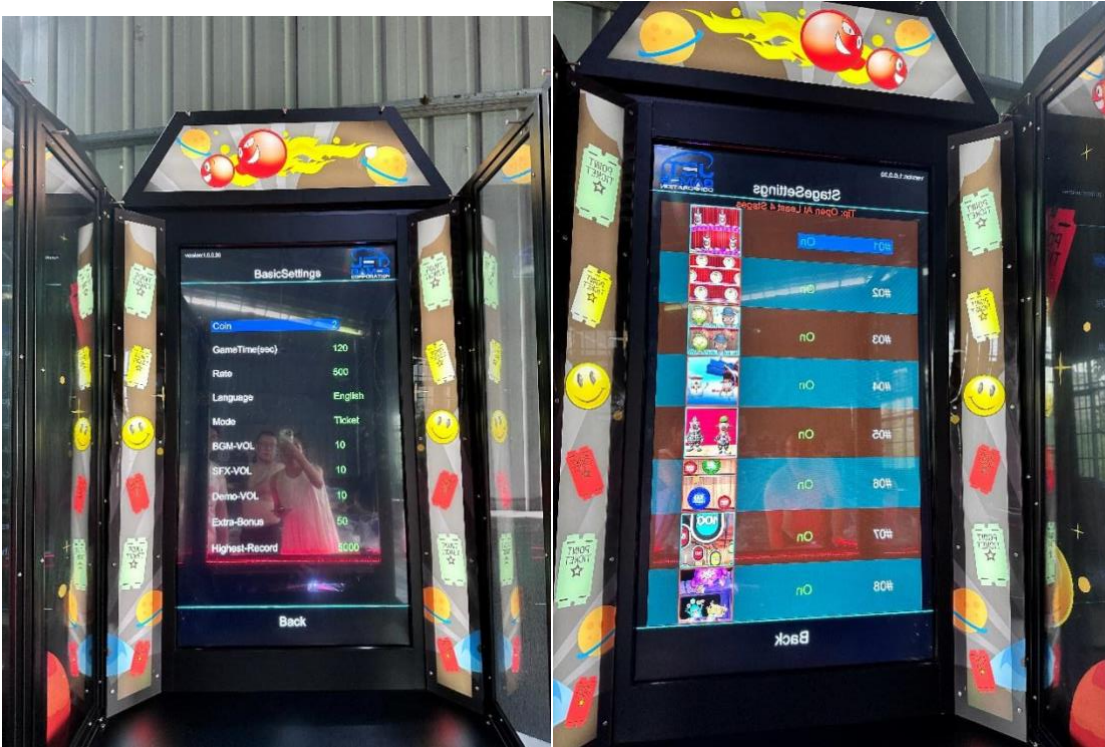

3、 Wiremap



How to install



1.Mounting Screws



2.Mounting Screws



3.Just plug it in according to the numbers on the line.



4.Flip Hinge



4.Install the triangular bracket



7.Link overhead white light bar to plug-in cable



8.Installation of tarpaulins



9, Mounting the head



10, Mounting the head

G. Maintenance and Troubleshooting

Safety check:

In order to ensure the safety of the machine, please check the following points before starting:

- Check if the connected power parameters are consistent with the machine;
- Check if the warning sign on the machine is clearly visible;
- Check if the machine is placed smoothly, whether the caster and the top foot are properly adjusted;

- Check if the machine is placed in an appropriate area;

Install and test:

- Before installation, please check the parts and components according to the list for assembly;
- The place must be flat and firm, adjust the foot to the ground level fixed after the machine is placed;
- After installation, plug power cord to open machine to check if all parts of the machine operate normally. If any abnormal phenomenon is found, stop the machine immediately and start up the machine only after removing obstacles;

Maintenance:

- Every day before business, should first test the normal operation before use
- When the machine collect dirt and dust, wipe it clean with soft cotton cloth and neutral cleaner
- After the new machine runs for one month, all parts should be checked to see if they are normal

Troubleshooting:

PROBLEM	PROBABLE CAUSE	SOLUTION
The game can't start	1.No power 2.Fault of power supply	1.Check the power supply AC220V voltage fault. 2. Measure D12V dc output, if not, change the power box.
No sound	1.Fault of speaker 2.Main board power failure 3.Fault of output	1.Change the speaker 2.Check the main board signal 3.Check the main board music output signal
Payout ticket(non-stop)	1.Fault of ticket dispenser 2. Fault of ticket PCB	1.Change the ticket dispenser 2.Check the PCB

Score box doesn't work	<ol style="list-style-type: none"> 1.Signal cable plug get loose. 2.Infrared off 3.The infrared score isn't work, the indicator light is not on 	<ol style="list-style-type: none"> 1.Attach 2.Change to new one 3.Change the score box
Can't pay out tickets	<ol style="list-style-type: none"> 1.Ticket dispenser jam or damage 2.Lack of tickets 	<ol style="list-style-type: none"> 1.Change the ticket dispenser. 2.After installing the ticket, press the "ticket dispenser recovery button" to issue the ticket

The machine must check the tightness of the fixed screw of each parts every 3 months!!!