 


Game Card Vending Machine Manual

 
A. How to use;

1. Insert coin or bill
2. Press below corresponding value button
3. Take the dispensed card

B. Parameter settings;

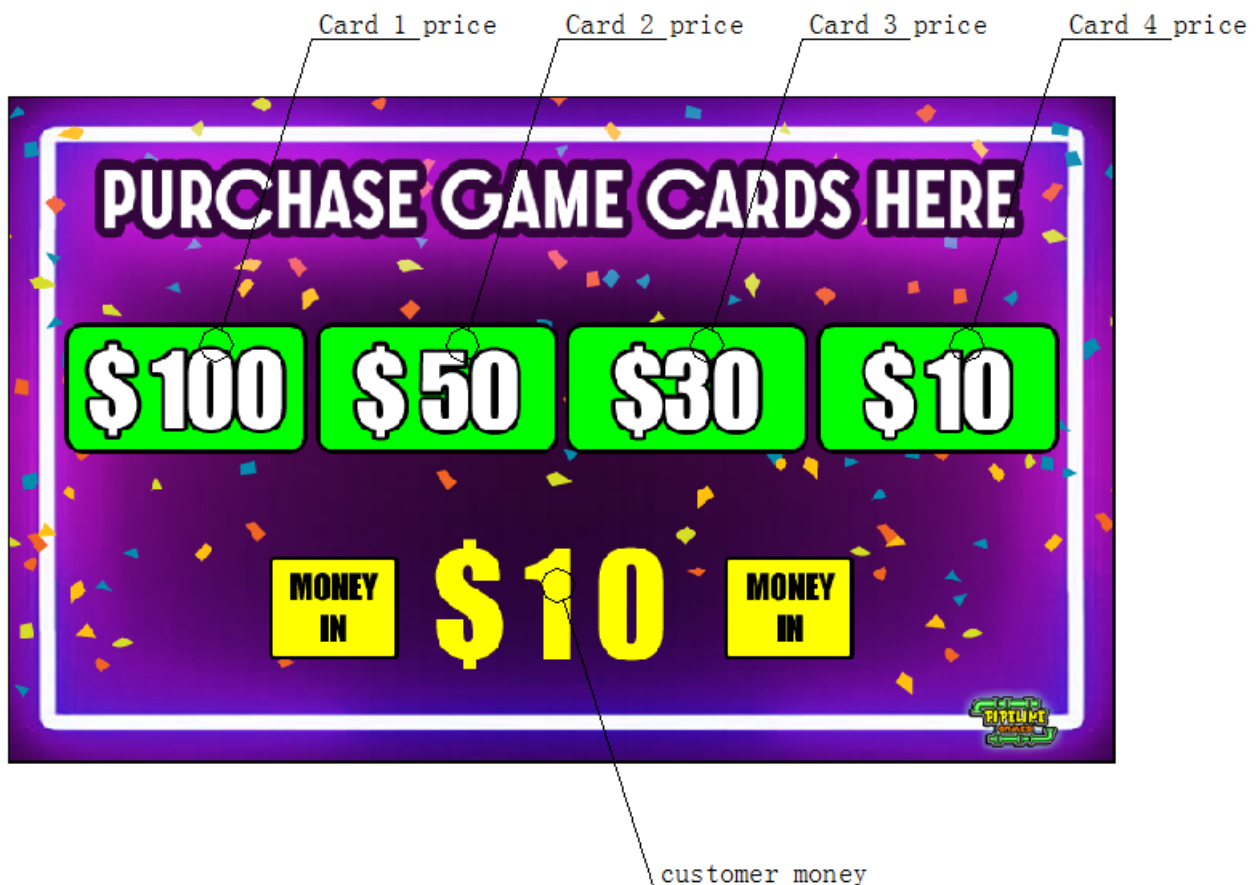

Press enter button for settings: Change parameter by up, down, left and right button. Exit after marking all changes.

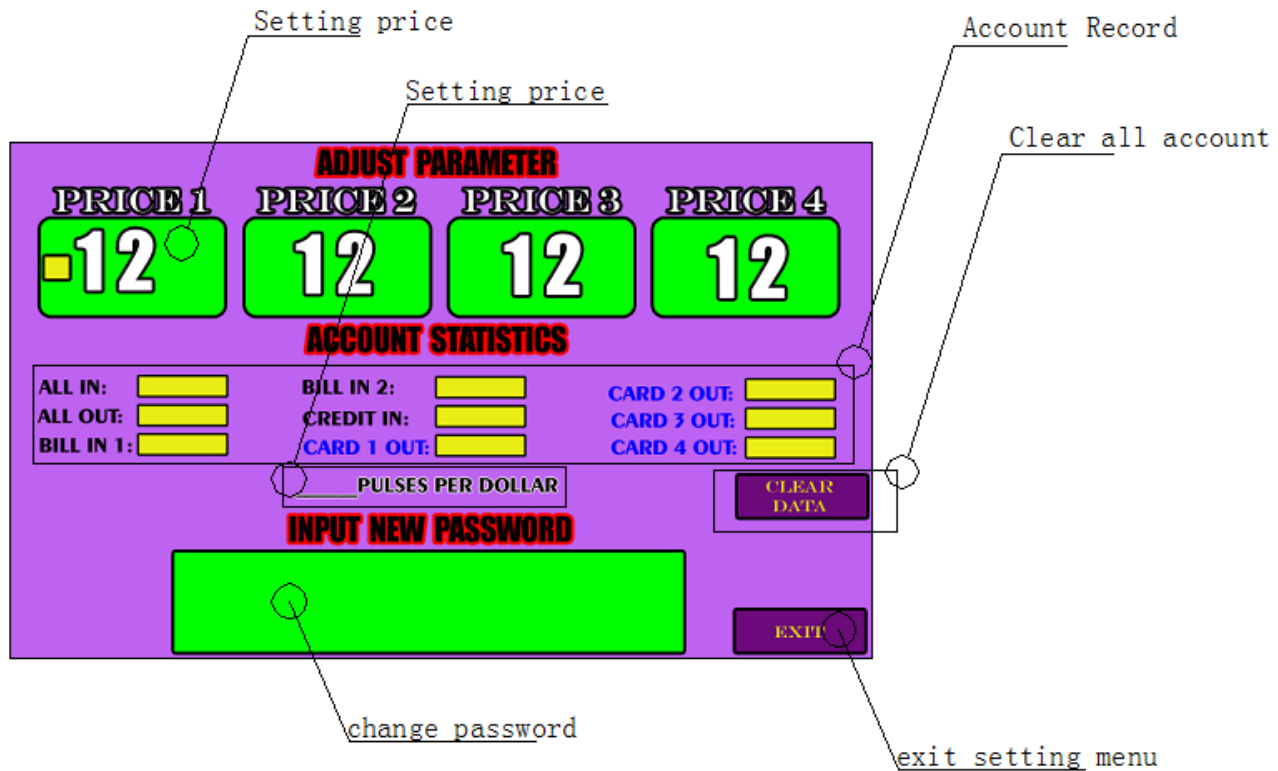

C. Easy trouble shooting:

1. Nothing on the display screen.

- Check if cables from main board to scree is no problem.
- Check if main board is working, if no problem, replace the display.

2. Coin acceptor or bill acceptor not working.

- Check cables

- Check if coin acceptor or bill acceptor indicator light is on
- Replace bill acceptor or coin acceptor

3. Money was inserted but no card came out.

 
Check button first to see if it's working

Check card dispenser

4. Continuous Beeping.

Check the levels of the cards in the card dispensers. Add cards to card dispenser.

D: Wiring;

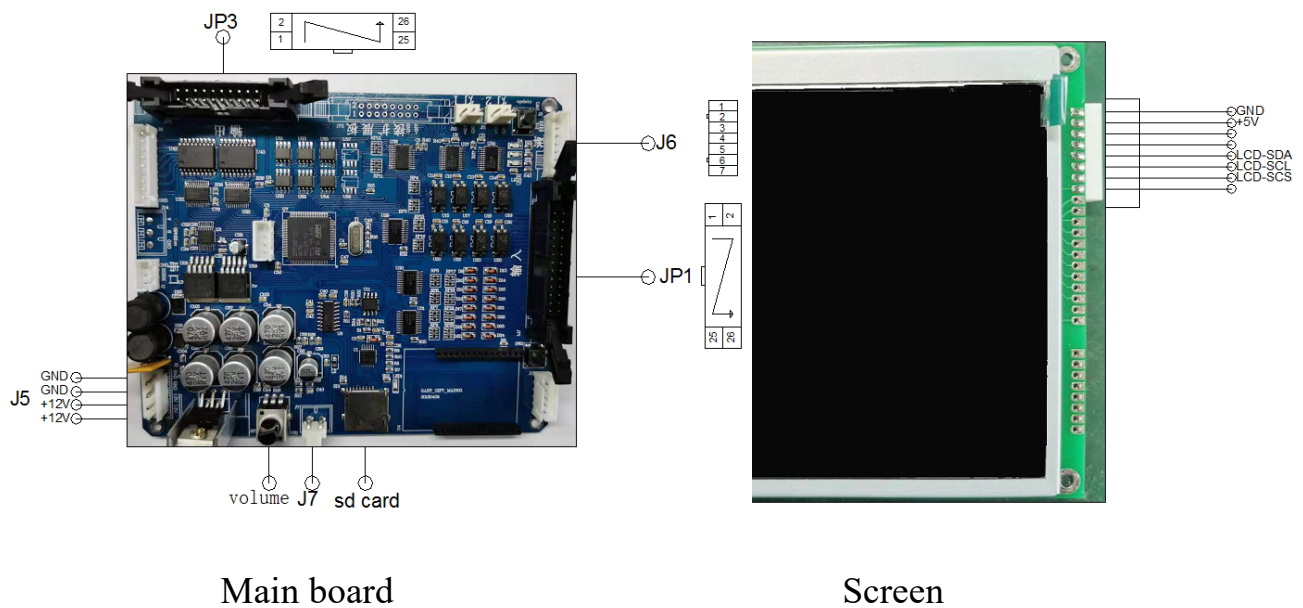

CON - NO.	PIN - NO.	FUNCTION
J6 LCD	1	+5V
	2	GND
	3	LCD-SCS
	4	LCD-SCL
	5	LCD-SDA
	6	
	7	


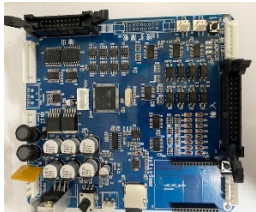 

Main board J6 screen port signal



CON - NO.	PIN - NO.	FUNCTION	PIN - NO.	FUNCTION
JP3	1	Meter-card 1	2	Meter-card 2
	3	Meter-card 3	4	Meter-card 4
	5	Meter-Bill 1	6	Meter-Bill 2
	7	Meter-Credit reader	8	
	9	Card 1-OUT	10	Card 1-CALLBACK
	11	Card 2-OUT	12	Card 2-CALLBACK
	13	Card 3-OUT	14	Card 3-CALLBACK
	15	Card 4-OUT	16	Card 4-CALLBACK
	17		18	
	19	+12V	20	+12V

Main board JP3 function list

CON - NO.	PIN - NO.	FUNCTION	PIN - NO.	FUNCTION
JP1	1	Card 1-OUTOK	2	Card 1-EMPTY
	3	Card 1-ERROR	4	Card 1-button
	5	Card 2-OUTOK	6	Card 2-EMPTY
	7	Card 2-ERROR	8	Card 2-button
	9	Card 3-OUTOK	10	Card 3-EMPTY
	11	Card 3-ERROR	12	Card 3-button
	13	Card 4-OUTOK	14	Card 4-EMPTY
	15	Card 4-ERROR	16	Card 4-button
	17	Setting-up	18	Setting-down
	19	Setting-left	20	Setting-right
	21	Setting-enter	22	Bill 1 - IN
	23	Bill 2 - IN	24	Credit - IN
	25	GND	26	GND

Main board JP1 function list

1	CV-DBA	
2	CV-Main Board	
3	CV-Display	

4	CV-Hand Held Programmer	
5	CV-Card Dispenser	
6	CV-Power Cord	
7	CV- Front Overlay	
8	CV-Entry/Exit Card Plate	
9	CV-Wheels	
10	CV-T Handle Lock/Key	
11	CV-Back Door Lock/Key	

12	CV-Power Supply	
13	CV-Meter	
14	CV- Left/Right Graphics	
15	CV-Front Acrylic	
16	CV-On/Off Assembly	
17	CV-Outlet	
18	CV-Button	